



WALKER

Illustrated Parts Manual

T23



Beginning S/N: 149093
P/N 8000-31

KEY TO ABBREVIATIONS USED IN THIS MANUAL

<i>Abbreviation</i>	<i>What it Represents</i>
° (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
AT	All-Terrain
CCW	Counter-clockwise
Conn	Connector
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SD	Side Discharge
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
Spg	Spring
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
Term	Terminal
V	Volts

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

ILLUSTRATED PARTS LIST


<i>Section of Tractor Covered</i>	<i>Page</i>	<i>Section of Tractor Covered</i>	<i>Page</i>
Decals		Electrical Components	
Tractor Decals	2	Electrical Assembly	32
Body / Chassis Assemblies		Electrical Assemblies (GHS 10.0 Bushel Components).....	34
Body / Chassis Assembly (GHS Models)	4	Electrical Connectors.....	36
Rear Body Assembly (GHS Models)	6	Maintenance	
Body Assembly (SD Models).....	8	Lubrication Points	38
Tractor Components		Wiring Schematic.....	40
Main Component Power Transmission		Warranty	
(GHS Models)	10	Limited Warranty	41
(SD Models)	12		
Engine Group.....	14		
Hydrostatic Ground Drive Assemblies.....	16		
Steering Control Assemblies.....	18		
Throttle & Choke Control Assemblies.....	20		
Parking Brake Assembly	22		
GHS Group	24		
GHS Powerfil® Assembly (10.0)	26		
GHS 10.0 Bushel Catcher Assembly.....	28		
Instrument Panel Assembly	30		

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQ'D. GHS	NO. REQ'D SD
Walker Product and Operation Decals					
1	8600-33	RH Fender	Body, RH Side Near Seat	1	1
2	5800	Walker Mower (4" Round)	Utility Bed (one on each side)	0	2
3	5800-11	Walker (8" Round)	10.0 Bushel Catcher (one on each side)	2	0
4	8821-10	Decal, T23	Body	1	1
5	5856-1	Made in USA	Body	1	1
Danger Decals Warning Decals Caution Decals					
6	8600-34	Warning, Read Manual	Body	1	1
7	5810-3	Decal, Hydro Warning	LH Gear Axle Drive Assembly	1	1
8	8600-12	Danger, Engine Exhaust	Front Body, LH Side	1	1
9	8600-10	Danger, Pinch Point	10.0 Bushel Catcher Mounting Frame Assembly (one on each side)	2	0
10	8600-4	Danger, Rotating Blower Blades	Body, Near Body Chute	1	0
Maintenance Decals					
11	8600-30	Parking Brake	Body, RH Side below Seat	1	1
12	5855	Important, Engine Cooling	Engine	1	1
13	5869	Removable Screen	10.0 Bushel Catcher Removable Screen	1	0
14	8600-16	Front Body Closure	Rear Cross Member, Body	1	1
15	7827	Oil Level	Jackshaft Support	1	1
16	5810-1	Axle Oil Level	Gear Axle Drive Assemblies (one on each)	2	2
17	8600-32	Choke	Body, LH Side	1	1
18	8600-31	Throttle	Body, LH Side	1	1
19	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1	1
20	NS	Sealed Reservoir	Hydrostatic Drives (one on each)	2	2

NOTE: All parts requiring decals are shipped with decals applied.


TRACTOR DECALS

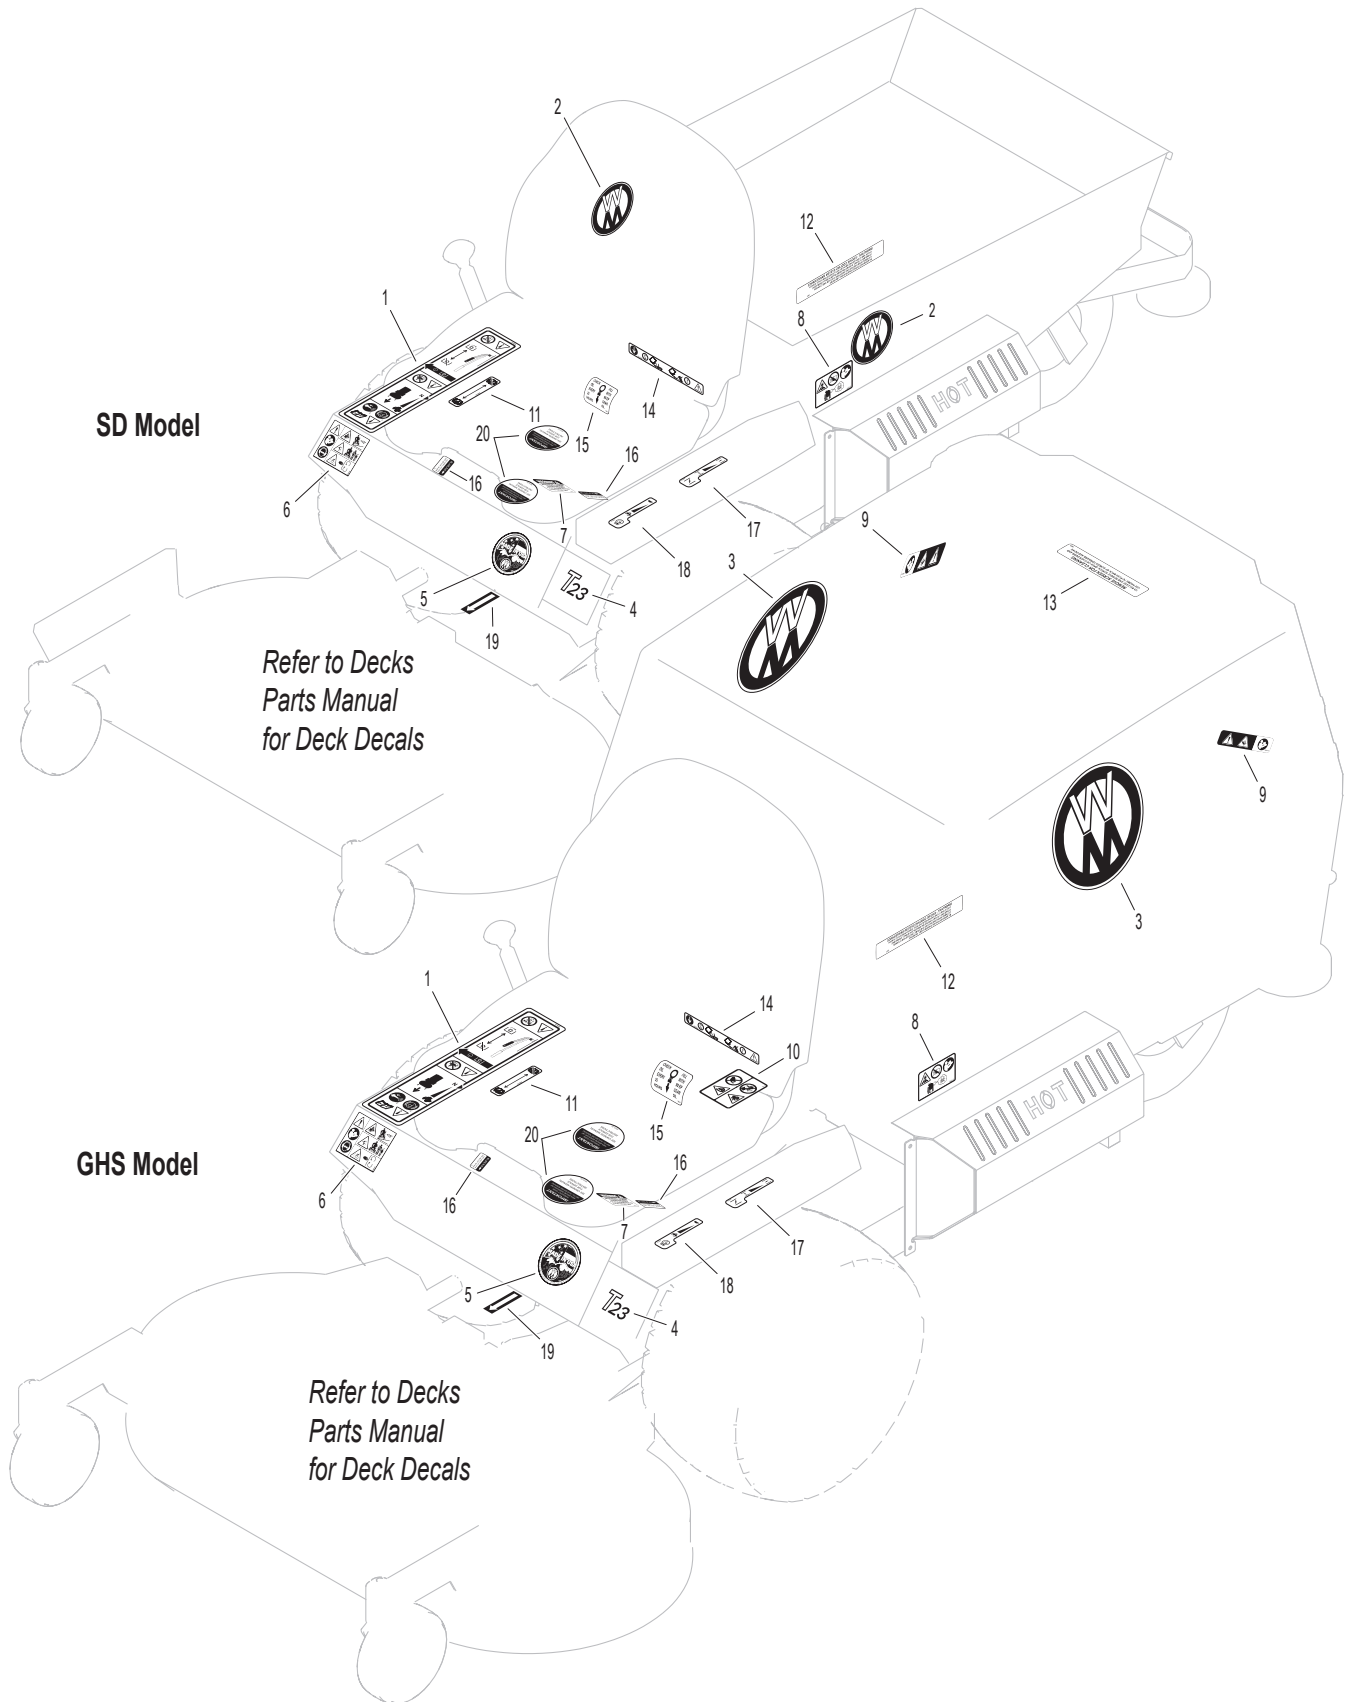

BODY / CHASSIS ASSEMBLY (GHS MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Seat Assembly				46	8035	Tail Wheel & Tire Assembly (13 x 5.00-6) (With Bearing Race)	2
1	6104-31	Comfort Seat	1				
2	2845-3	Aluminum Washer (5/16 x 1 x 1/4)	4	7035-1	Tail Wheel Tire (13 x 5.00-6)	**	
3	7845-1	Rubber Bumper (1.375 x .750)	2	8036	Wheel & Hub (6 x 3.25) (Includes Items # 40 & Bearing Race)	**	
4	6105-1	Shoulder Washer	2	8037-2	Bearing Race	**	
Rear Bumper Assembly (GHS Models Only)*				7420-20		Dual Tail Wheel & Tire Assembly (Includes Items # 41-46)	**
5	7516	GHS Rear Bumper	1	47	7070	Wheel & Tire Assembly (18 x 9.50-8)	2
6	7516-5	Catcher Pivot Bushing	2	7070-1	Drive Tire (18 x 9.50-8)	**	
7	5162	Roller Wheel (5" Rubber)	2	5070-4	Wide Wheel (8 x 7)	**	
8	7517-3	Catcher Pivot Plate	2	48	5140-17	FSC Support	1
Body Assembly				49	8300-14	Chassis Frame (T / 5.0 gal.)	1
9	7383-6	Body Latch Bracket, RH	1	Fasteners			
10	7383-5	Body Latch Lever	1	F002	10-24 Keps Nut	2	
11	7383-7	Body Latch Bracket, LH	1	F004	1/4-20 Keps Nut	8	
12	7222	Extension Spring (1/4 x 3)	1	F009	5/16-18 Whiz Locknut	11	
13	5989-12	Dome Plug (3/16)	1	F012	3/8-16 Keps Nut	4	
14	5989-10	Dome Plug (9/16)	1	F014	3/8-16 ESNA Nut	4	
15	8101-8	Front Body Engine Guard	1	F020	5/16-18 ESNA Nut	1	
16	NS	Body ID Plate	1	F025	10-24 x 3/8 PPHMS	2	
17	5845	Rubber Bumper (1.50 OD x 1.25)	4	F029	1/4-20 x 1/2 Hex Bolt	6	
18	8118	Heat Deflector	1	F031	1/4-20 x 5/8 Hex Bolt	3	
19	7422	Panel Guard	1	F034	5/16-18 x 3/4 Hex Bolt	2	
20	5989-4	Dome Plug (3/8)	4	F035	5/16-18 x 1-1/4 Hex Bolt	4	
21	5989-3	Dome Plug (5/16)	2	F038	3/8-16 x 1 Hex Bolt	6	
22	5146	10mm Ball Stud	2	F040	3/8-16 x 1-1/2 Hex Bolt	2	
23	2145	Gas Spring Assembly (Includes Item # 22)	1	F041	3/8-16 x 1-3/4 Hex Bolt	2	
24	7844	Rubber Bumper (1.25 OD x .250)	1	F042	3/8-16 x 2-1/4 Hex Bolt	2	
25	5989-9	Dome Plug (1/4)	4	F049	5/16 SAE Washer	2	
26	8100-11	Front Body	1	F050	1/4 SAE Washer	3	
27	5180	Edge Molding, Lever Opening	2	F051	3/8 SAE Washer	2	
28	5989-55	Dome Plug (1/2)	1	F059	3/8 Wave Spring Washer	2	
29	5989-5	Dome Plug (7/16)	1	F093	5/16-18 x 1 Hex Bolt	1	
Tilt-Up Latch Assembly***				F157	1/2-20 x 1-1/4 Wheel Lug Bolt	8	
30	5847	Plastic Tip	1	F205	5/16-18 x 1/4 Set Screw, Knurl Point	2	
31	5744-20	Spring Arm, Tilt-Up Latch	1	F206	#2 x 3/16 Drive Pin	2	
32	5744-10	Spring Pivot Bushing	1	F218	7/16 Split Lock Washer	2	
33	5744-15	Compression Spring (3/8 x 5/8)	1	F219	7/16-14 x 1-1/4 Hex Bolt	2	
34	5744-13	Mount Angle, LH	1	F241	.375 x .875 x .10 Washer	4	
35	5744-12	Hook, Tilt-Up Latch	1	F256	7/16 SAE Washer	2	
36	5744-14	Mount Angle, RH	1	F341	Coil Roll Pin (7/64 x 9/16)	1	
Chassis Assembly				F342	5/16 Conical Washer	2	
37	5267-1	Retainer Collar (1") (Includes Item # F413)	1	F413	5/16-24 x 5/16 Set Screw	2	
38	5270-1	Pivot Bearing	2	F570	3/8-16 Flange Top Lock Nut	4	
39	7420	Tail Wheel Fork	1	F591	7/16-14 Flange Top Lock Nut	2	
40	5830-3	Grease Fitting (45 Degree)	2	F592	7/16-14 x 1-1/8 Hex Bolt GR 5	2	
41	8039	Nut, Tail Wheel Axle	2	* Rear Bumper Assembly for SD Models is not shown here. Refer to BODY ASSEMBLY (SD MODELS) , Page 8.			
42	8768-2	Seal, Reverse Lip	4	** Service Part Only			
43	8038-1	Spacer, Tail Wheel Axle (.750 ID x 1.125 OD)	2	*** Complete Tilt-Up Latch Assembly Kit available by ordering kit # 5747.			
44	8037	Bearing Cone (3/4 ID)	4				
45	8038	Tail Wheel Axle (3/4 x 10-3/8)	1				

BODY / CHASSIS ASSEMBLY (GHS MODELS)

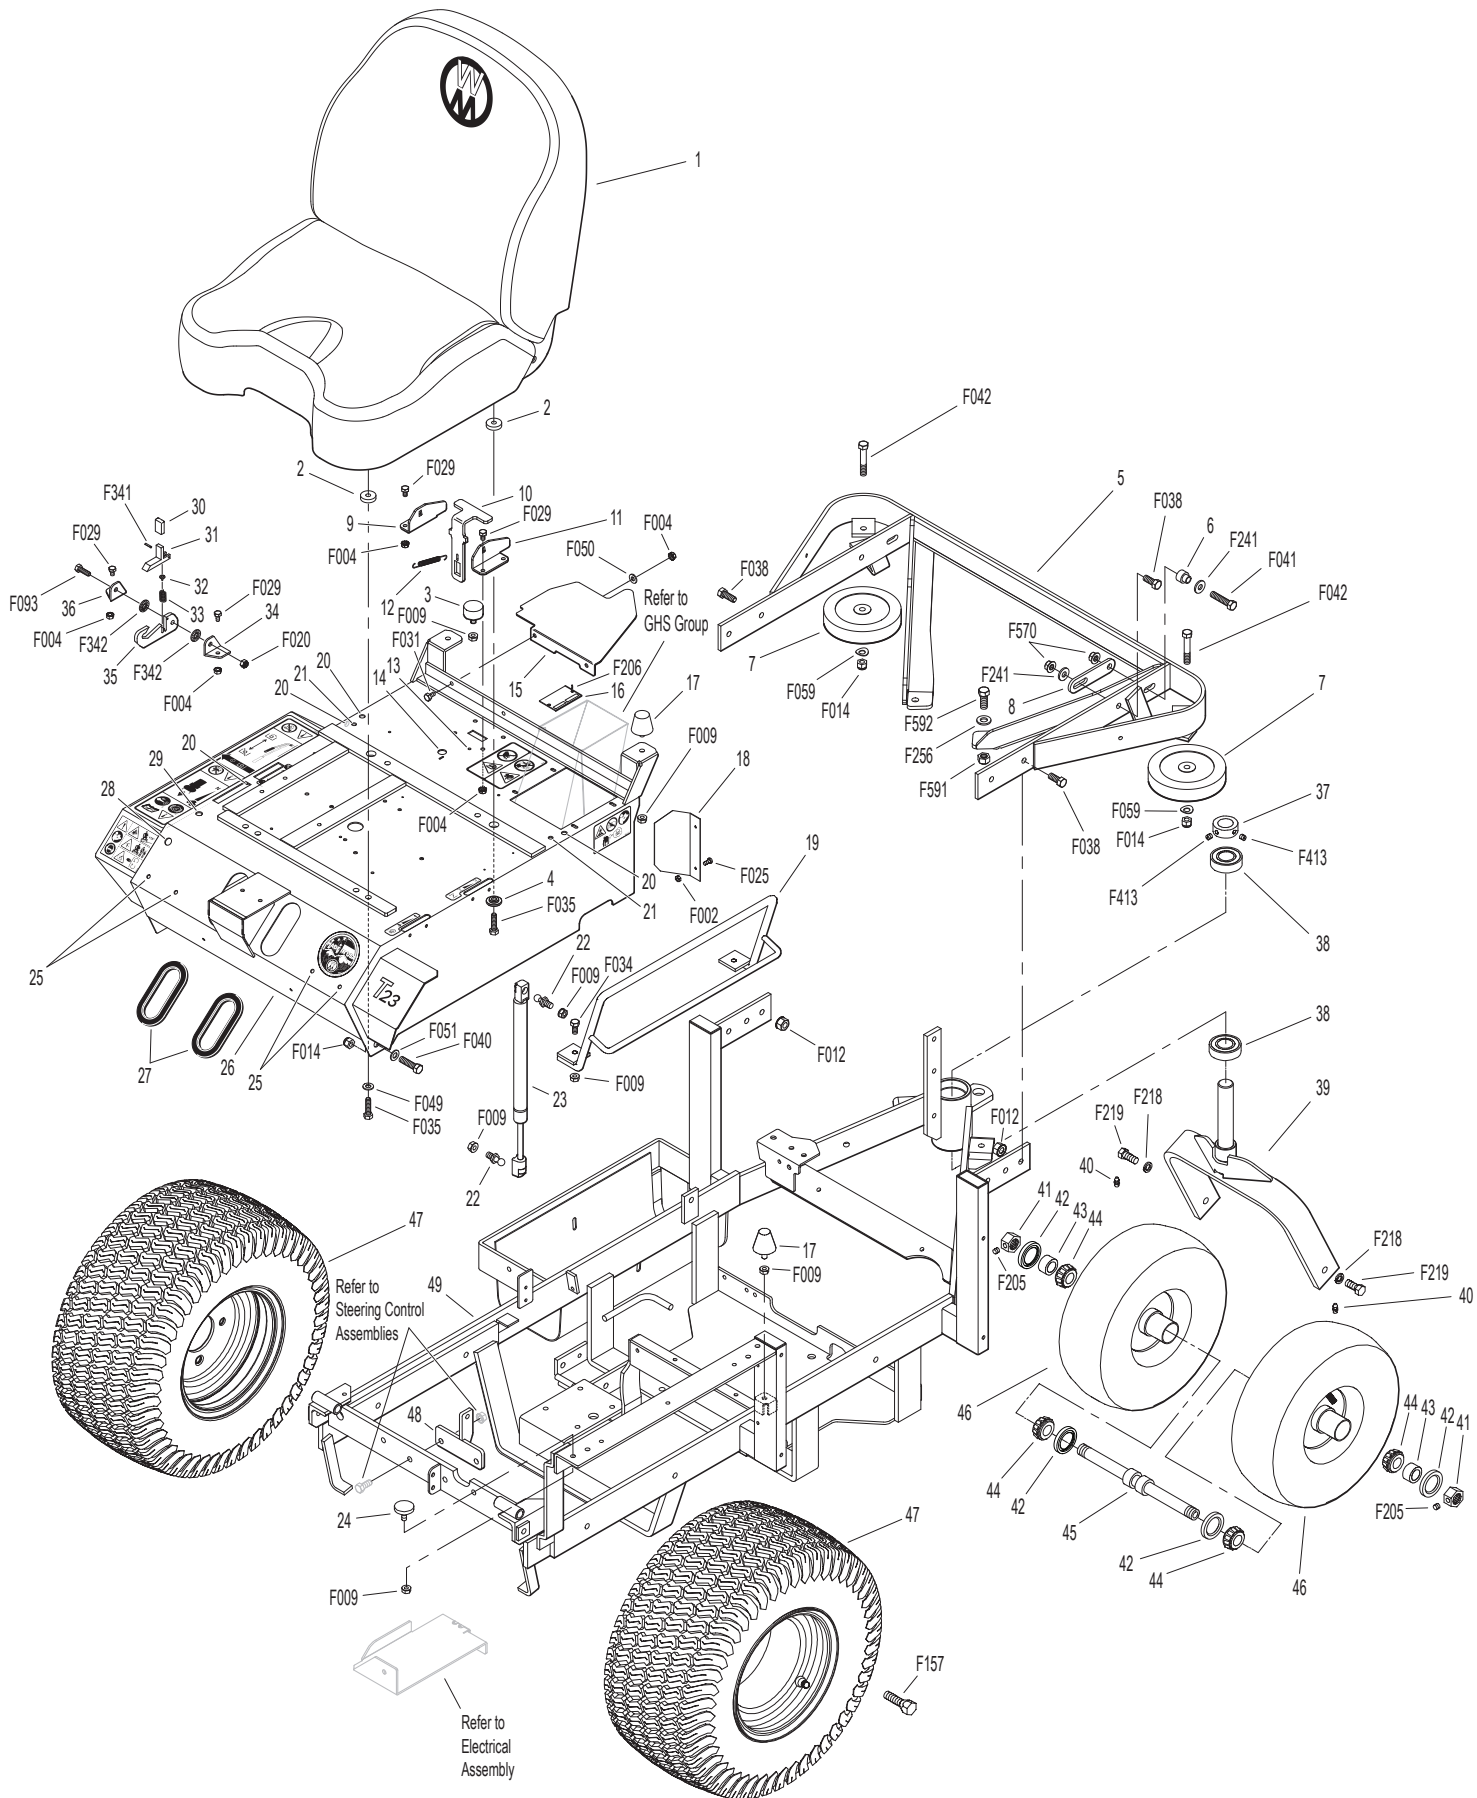


Beginning S/N 149093
 Use only genuine **Walker®** replacement parts.

REAR BODY ASSEMBLY (GHS MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Rear Body Assembly (GHS Models)				Fasteners			
1	7190-3	Insulation Foam Pad (5 x 20)	1	F002		10-24 Keps Nut	14
2	8082	Heat Shield	1	F004		1/4-20 Keps Nut	5
3	8515-14	Catcher Handle Plate, RH	1	F009		5/16-18 Whiz Locknut	2
4	8515-13	Catcher Handle Plate, LH	1	F025		10-24 x 3/8 PPHMS	8
5	8615-3	Catcher Support Frame, 10.0	1	F026		10-24 x 1/2 PPHMS	5
6	7190-2	Insulation Foam Pad, RH	1	F027		10-24 x 5/8 PPHMS	1
7	7190-1	Insulation Foam Pad, LH	1	F031		1/4-20 x 5/8 Hex Bolt	2
8	5832	Cable Clamp (1/2)	1	F032		1/4-20 x 3/4 Hex Bolt	1
9	7145	Gas Spring Assembly (Includes Items # 11 & 12)	1	F085		3/16 Rivet Backup Washer	2
10	8389-5	Splash Guard	1	F178		1/4 x 1 Fender Washer	1
11	7147	Spring Clip	2	F390		1/4-20 x 7/8 Carriage Bolt	2
12	7146	13mm Ball Stud	2	NOTE: Rear Bumper Assembly for GHS Models is not shown here. Refer to BODY / CHASSIS ASSEMBLY (GHS MODELS) , Page 4.			
13	8105-1	Rear Body Panel	1				

REAR BODY ASSEMBLY (GHS MODELS)

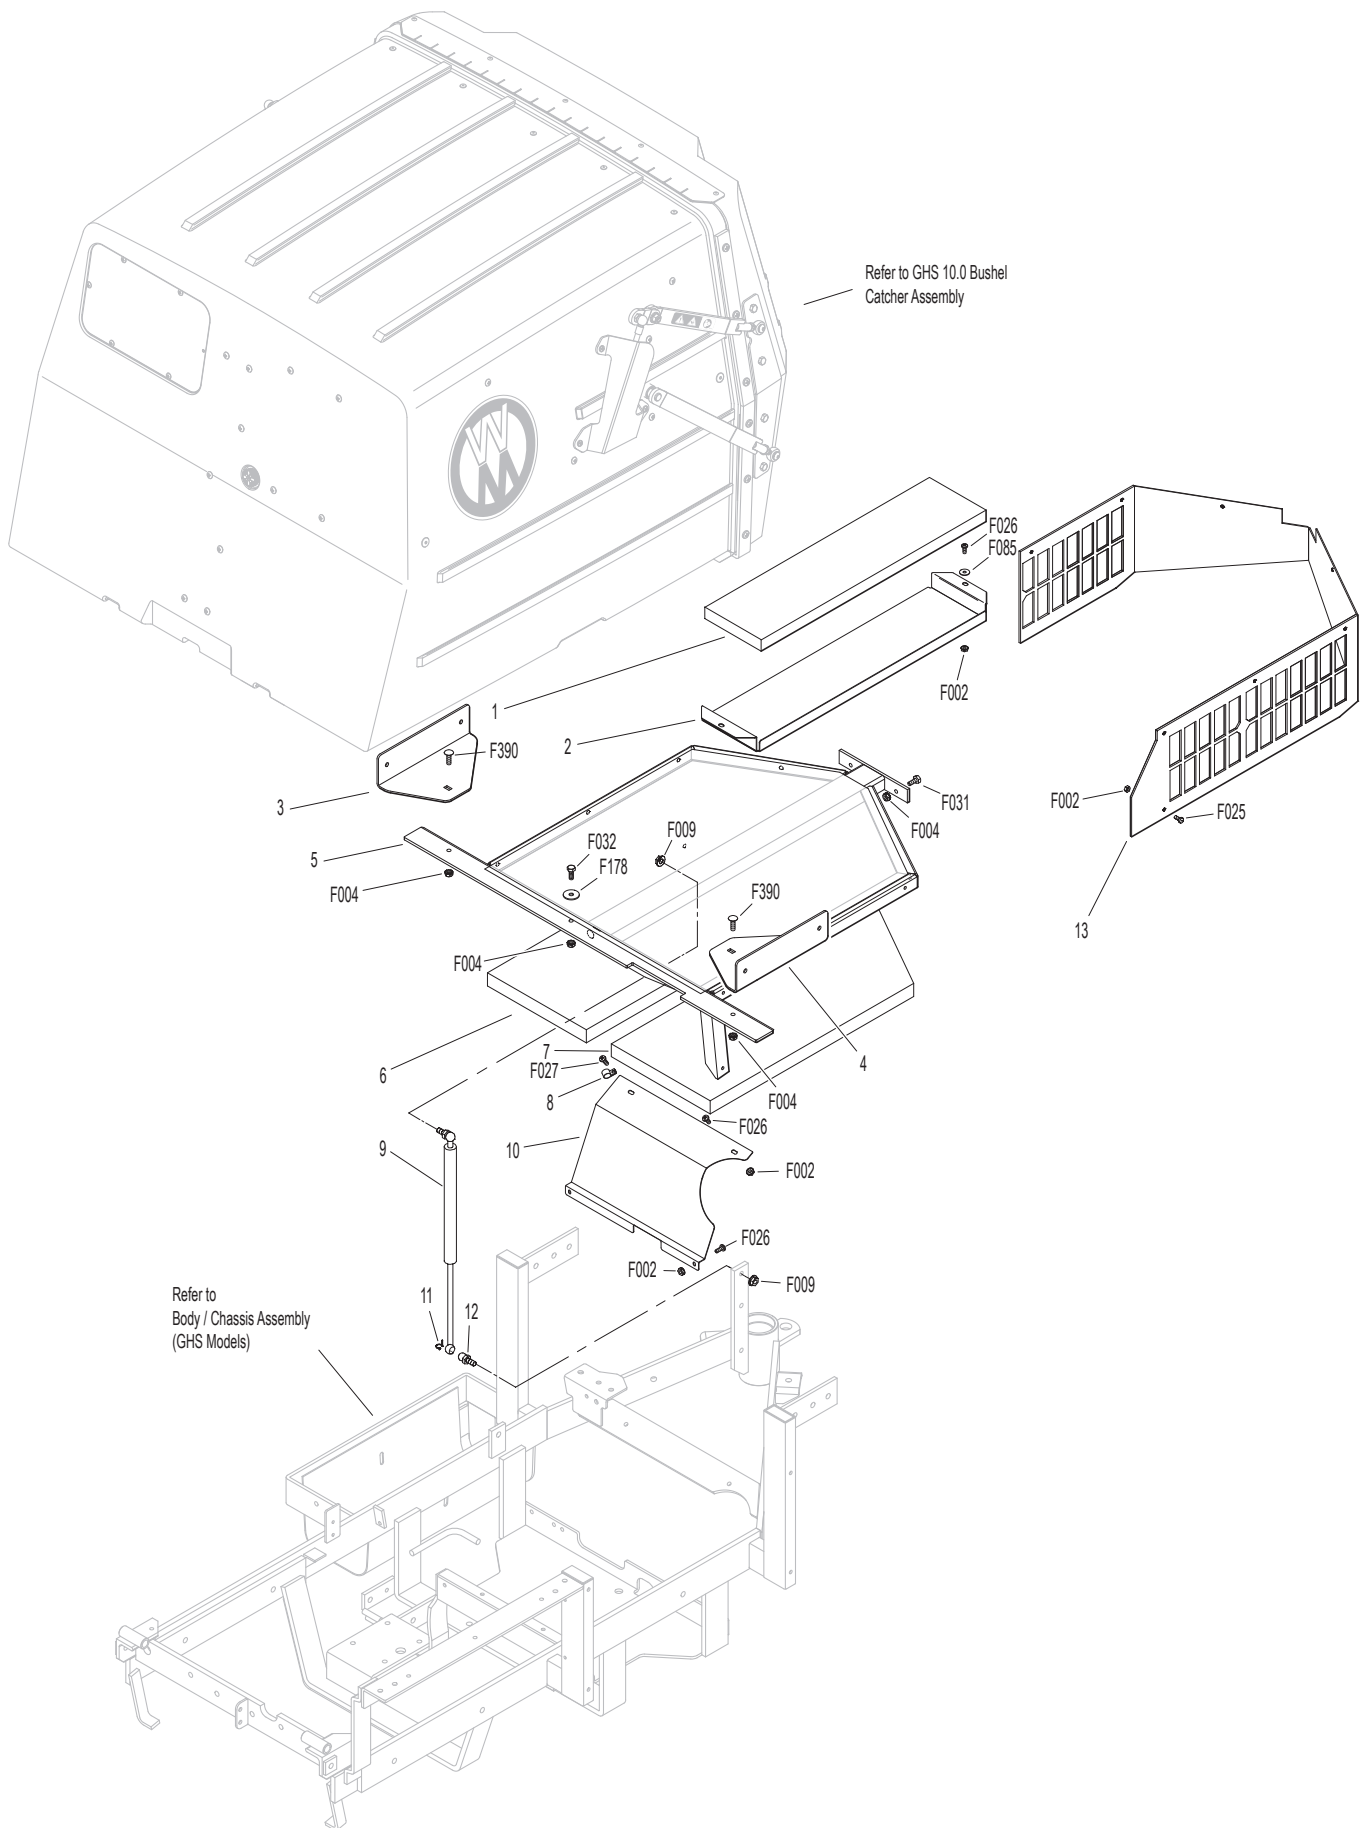


Beginning S/N 149093
Use only genuine **Walker**® replacement parts.

BODY ASSEMBLY (SD MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Utility Bed Assembly				Fasteners			
1	8650-10	Bed Liner (21.5 x 27.5)	1	F002		10-24 Keps Nut	16
2	8650-2	Utility Bed (Includes Item # 1)	1	F009		5/16-18 Whiz Locknut	2
3	7190-2	Insulation Foam Pad, RH	1	F012		3/8-16 Keps Nut	6
4	7190-1	Insulation Foam Pad, LH	1	F013		3/8-16 Whiz Locknut	2
Rear Bumper Assembly (SD Models)				F014		3/8-16 ESNA Nut	2
5	7153-3	Cover Plate	1	F025		10-24 x 3/8 PPHMS	8
6	7145	Gas Spring Assembly (Includes Items # 7 & 8)	1	F026		10-24 x 1/2 PPHMS	3
7	7147	Spring Clip	2	F027		10-24 x 5/8 PPHMS	1
8	7146	13mm Ball Stud	2	F038		3/8-16 x 1 Hex Bolt	6
9	7521	Rear Bumper	1	F040		3/8-16 x 1-1/2 Hex Bolt	2
10	5162	Roller Wheel (5" Rubber)	2	F042		3/8-16 x 2-1/4 Hex Bolt	2
11	8105-1	Rear Body Panel	1	F051		3/8 SAE Washer	2
12	8389-5	Splash Guard	1	F059		3/8 Wave Spring Washer	2
				F128		10-24 x 3/8 PTHMS	4
<p>NOTE: Refer to BODY / CHASSIS ASSEMBLY (GHS MODELS), Page 4 for all common parts used on both models.</p>							

BODY ASSEMBLY (SD MODELS)

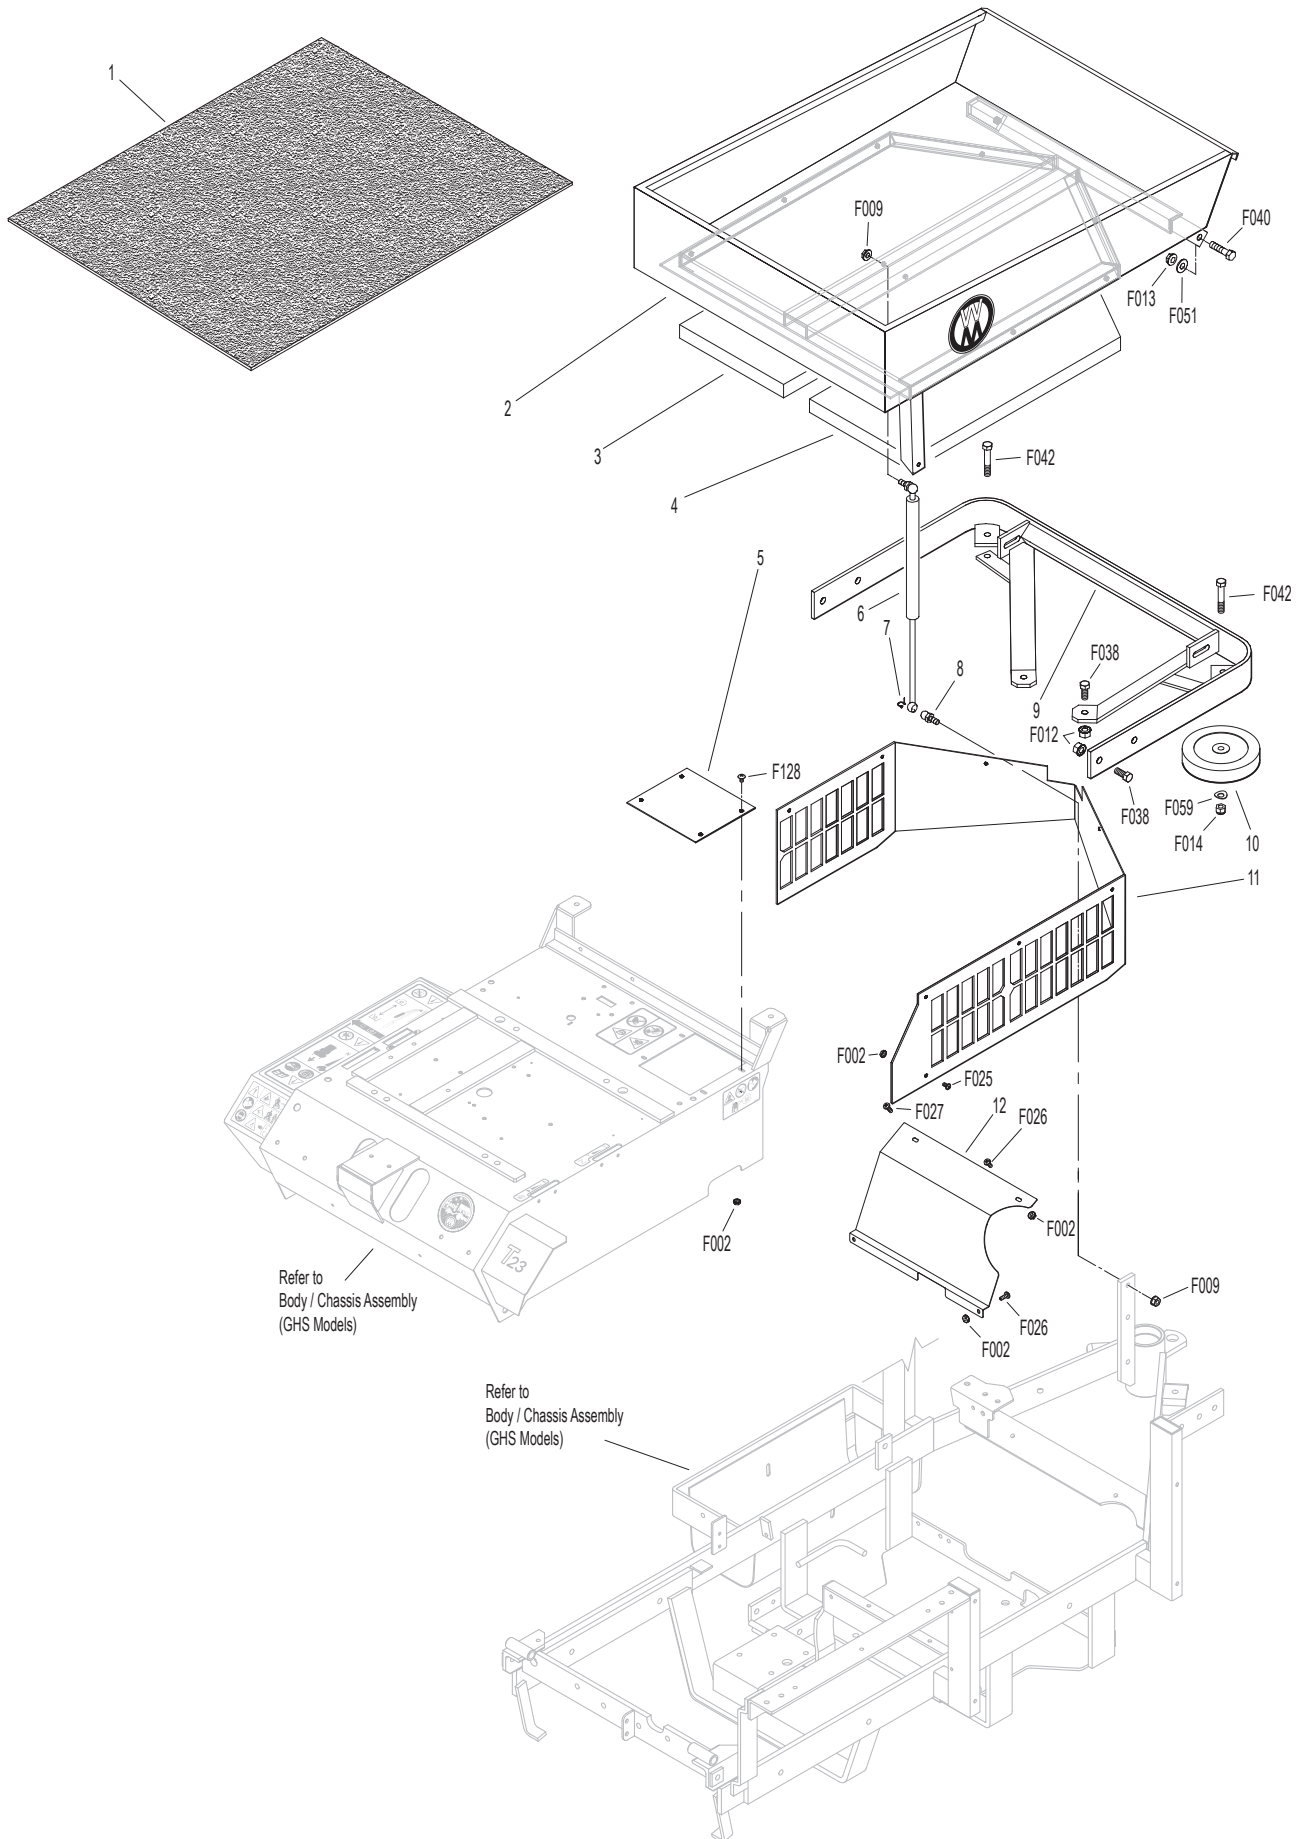


Beginning S/N 149093
 Use only genuine **Walker**® replacement parts.

MAIN COMPONENT POWER TRANSMISSION (GHS MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Clutch Lever Assembly				40	6325-2	Spacer Bushing (5/16)	2
1	8358-3	Clutch Lever (Includes Items # 2 & 3)	1	41	8349-2	Idler Arm	1
2	5830	Grease Fitting	7	42	7201-4	Inner Race (1-1/2)	2
3	4850	Handle Grip, Black	1	43	5221-1	Extension Spring (3/4 x 5)	2
4	7303-10	Clutch Actuator Bolt (3/8)	1	44	8539	Starter Relay Mount	1
5	7380-5	Knuckle Joint (3/8 ID)	1	45	5268	Bearing W/Collar (3/4)	2
6	7226-10	Compression Spring (3/4 x 2-1/2)	1	46	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F171)	1
7	8130-5	Pushrod, Clutch Actuator (Threaded Tube) (Includes Item # 2)	1	47	7833	Cable Clamp (7/8 x 1/4)	1
8	8130-10	Clutch Actuator Rod Assembly (Includes Items # 2, 4-7, F054, F336 & F353)	1	48	8349	Transmission Belt Tightener Arm	1
9	7201-3	Fiberglide Bearing	6	49	8393-7	Hydro Jackshaft Mount	1
10	7201-5	Inner Race (2-1/4)	1		8394-1	Hydro Jackshaft Mount Assembly (Includes Items # 2, 9, 42, 45, 49 & 50)	*
11	8368	PTO Belt Tightener	1	50	8273	Jackshaft (3/4 x 7-1/2)	1
12	5841	Retainer Washer (3/8 x 1-1/4)	4	51	7240-4	Jackshaft Drive Pulley (3.3/3V) (Includes Items # F067 & F171)	1
13	8243-1	Clutch Idler Pulley	1	Fasteners			
	8243	Clutch Idler Pulley Assembly (Includes Items # 13-15 & F070)	*	F003	1/4-28 Hex Nut		2
14	5265	Bearing (3/4)	1	F004	1/4-20 Keps Nut		3
15	8243-3	Hub, Idler Pulley	1	F005	1/4-20 ESNA Nut		1
16	8375	PTO Belt Tightener Stop	1	F009	5/16-18 Whiz Locknut		3
17	7377	Plastic Washer (1 x .438 x .025)	2	F012	3/8-16 Keps Nut		7
18	7378	Pivot Bearing (7/16 x 9/16)	1	F029	1/4-20 x 1/2 Hex Bolt		1
19	5281-5	Clevis Pin (1/4 x 0.80)	2	F040	3/8-16 x 1-1/2 Hex Bolt		1
20	5280	Clevis (1/4)	2	F041	3/8-16 x 1-3/4 Hex Bolt		2
21	8305	Brake Actuator Rod	1	F042	3/8-16 x 2-1/4 Hex Bolt		3
22	8370	Bearing, Brake Actuator	1	F043	3/8-16 x 3 Hex Bolt		1
23	8250	Brake Spring (1/2 x 2-1/2)	1	F047	3/8-16 x 4-1/2 Hex Bolt		1
24	8369	Brake Actuator (Includes Items # 2 & 22)	1	F054	AN960616 Washer		3
PTO Drive Shaft Assembly				F061	1/4 Internal Star Lock Washer		1
25	7050-1	Dipstick, Gearbox	1	F067	3/16 x 3/16 x 1 Key		2
26	8371-1	Mount Bracket, Brake Band	1	F069	3/32 x 1/2 Cotter Pin		3
27	8377	Brake Band Guide	1	F070	1-3/4 Internal Snap Ring		1
28	8050-11	PTO Gearbox / Flange Pulley	1	F090	1/4-20 x 2-1/2 Hex Bolt		1
29	5245	Idler Pulley (3")	2	F116	1/4-20 x 1-1/4 Hex Bolt		1
30	7248	Ground Drive Belt, Micro-V	1	F121	5/16-18 x 3/8 x 1 SHL Bolt		1
31	7275-16	Universal Joint Tube Assembly / Spline	1	F131	5/16-18 x 1/2 Hex Bolt		2
32	7275-9	Quick Coupler Installation Tool	1	F132	1/4-20 x 2-3/4 Hex Bolt		1
33	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1	F168	5/16 Split Lock Washer		14
34	8304	Brake Band (14-1/2)	1	F171	5/16-18 x 3/8 Set Screw		4
35	6250-1	Drive Belt (3VX370)	1	F178	1/4 x 1 Fender Washer		1
36	7236-1	PTO Drive Pulley (4-1/2/3V) (Includes Items # F168 & F226)	1	F182	1/4 x 5/8 x 1/8 Washer		2
37	8237-2	Engine Pulley, Bolt On (4/3.8/3V) (Includes Items # F168 & F226)	1	F226	5/16-18 x 7/8 Hex Bolt		14
38	8230	Engine PTO Belt	1	F241	.375 x .875 x .10 Washer		1
Jackshaft Assembly				F255	5/16-18 x 1-1/2 Hex Bolt		2
39	7245-1	Idler Pulley (3/8 Groove)	1	F261	AN960616L Washer		1
				F336	3/8-16 Jam Nut		1
				F353	3/8-16 ESNA LP Nut		1
				* Service Part Only			

MAIN COMPONENT POWER TRANSMISSION (GHS MODELS)

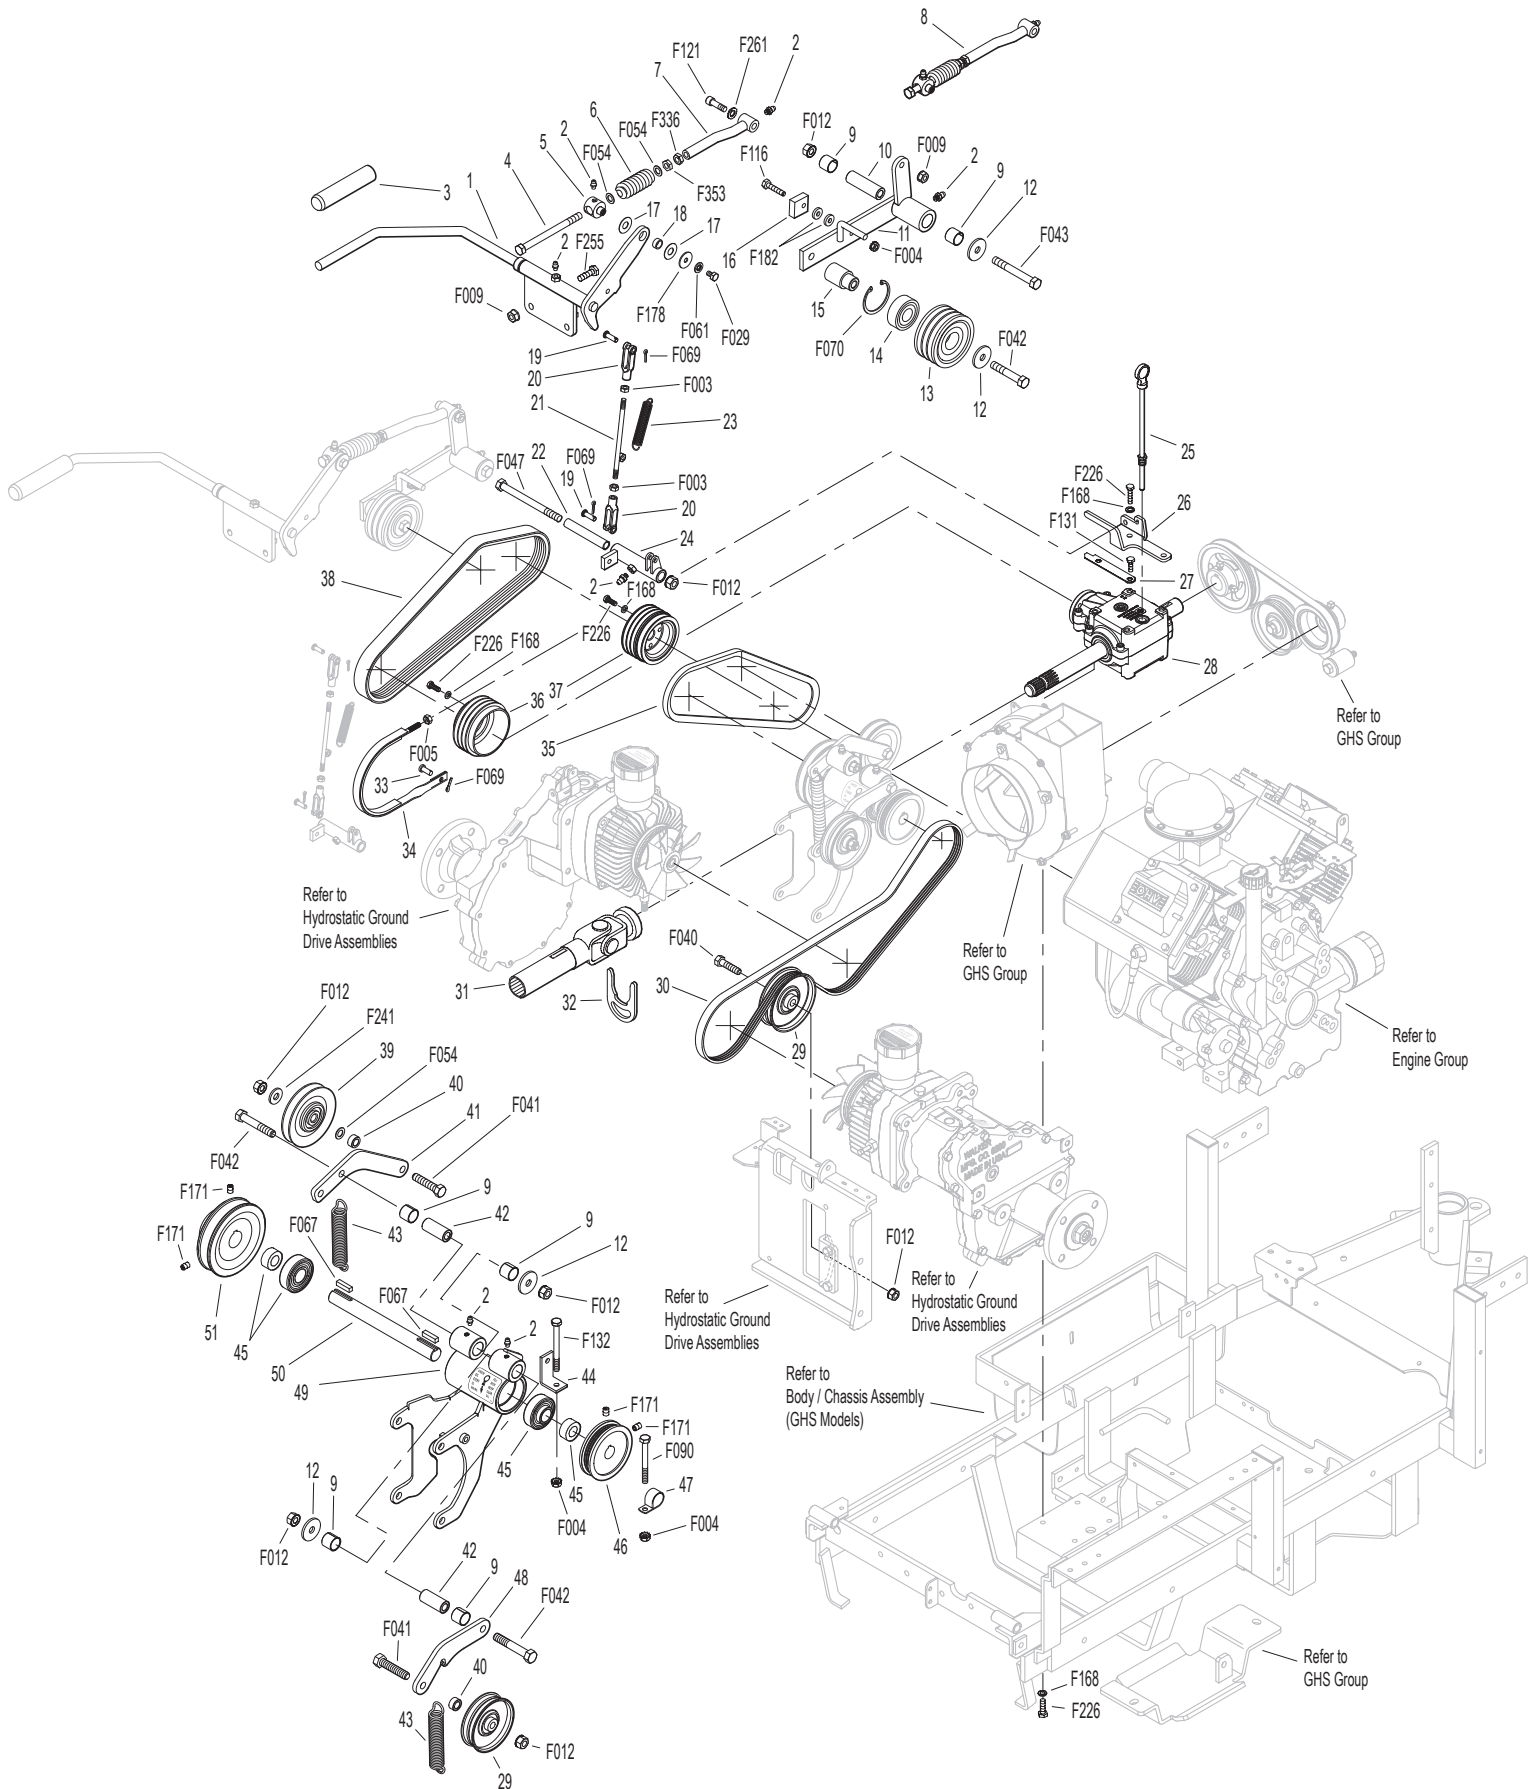


Beginning S/N 149093
Use only genuine **Walker**® replacement parts.

MAIN COMPONENT POWER TRANSMISSION (SD MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	
Clutch Lever Assembly				40	6325-2	Spacer Bushing (5/16)	2	
1	8358-3	Clutch Lever (Includes Items # 2 & 3)	1	41	8349-2	Idler Arm	1	
2	5830	Grease Fitting	7	42	7201-4	Inner Race (1-1/2)	2	
3	4850	Handle Grip, Black	1	43	5221-1	Extension Spring (3/4 x 5)	2	
4	7303-10	Clutch Actuator Bolt (3/8)	1	44	8539	Starter Relay Mount	1	
5	7380-5	Knuckle Joint (3/8 ID)	1	45	5268	Bearing W/Collar (3/4)	2	
6	7226-10	Compression Spring (3/4 x 2-1/2)	1	46	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F171)	1	
7	8130-5	Pushrod, Clutch Actuator (Threaded Tube) (Includes Item # 2)	1	47	7833	Cable Clamp (7/8 x 1/4)	1	
8	8130-10	Clutch Actuator Rod Assembly (Includes Items # 2, 4-7, F054, F336 & F353)	1	48	7394-6	Idler Pulley Spring Mount	1	
9	7201-3	Fiberglide Bearing	6	49	8349	Transmission Belt Tightener Arm	1	
10	7201-5	Inner Race (2-1/4)	1	50	8393-7	Hydro Jackshaft Mount	1	
11	8368	PTO Belt Tightener	1		8394-1	Hydro Jackshaft Mount Assembly (Includes Items # 2, 9, 42, 45, 50 & 51)	*	
12	5841	Retainer Washer (3/8 x 1-1/4)	4	51	8273	Jackshaft (3/4 x 7-1/2)	1	
13	8243-1	Clutch Idler Pulley	1	52	7240-4	Jackshaft Drive Pulley (3.3/3V) (Includes Items # F067 & F171)	1	
	8243	Clutch Idler Pulley Assembly (Includes Items # 13-15 & F070)	*	Fasteners				
14	5265	Bearing (3/4)	1		F003	1/4-28 Hex Nut	2	
15	8243-3	Hub, Idler Pulley	1		F004	1/4-20 Keps Nut	3	
16	8375	PTO Belt Tightener Stop	1		F005	1/4-20 ESNA Nut	1	
17	7377	Plastic Washer (1 x .438 x .025)	2		F009	5/16-18 Whiz Locknut	3	
18	7378	Pivot Bearing (7/16 x 9/16)	1		F012	3/8-16 Keps Nut	7	
19	5281-5	Clevis Pin (1/4 x 0.80)	2		F029	1/4-20 x 1/2 Hex Bolt	1	
20	5280	Clevis (1/4)	2		F040	3/8-16 x 1-1/2 Hex Bolt	1	
21	8305	Brake Actuator Rod	1		F041	3/8-16 x 1-3/4 Hex Bolt	2	
22	8370	Bearing, Brake Actuator	1		F042	3/8-16 x 2-1/4 Hex Bolt	3	
23	8250	Brake Spring (1/2 x 2-1/2)	1		F043	3/8-16 x 3 Hex Bolt	1	
24	8369	Brake Actuator (Includes Items # 2 & 22)	1		F047	3/8-16 x 4-1/2 Hex Bolt	1	
PTO Drive Shaft Assembly						F054	AN960616 Washer	3
25	7050-1	Dipstick, Gearbox	1		F061	1/4 Internal Star Lock Washer	1	
26	8371-1	Mount Bracket, Brake Band	1		F067	3/16 x 3/16 x 1 Key	2	
27	8377	Brake Band Guide	1		F069	3/32 x 1/2 Cotter Pin	3	
28	8050-11	PTO Gearbox / Flange Pulley	1		F070	1-3/4 Internal Snap Ring	1	
29	5245	Idler Pulley (3")	2		F090	1/4-20 x 2-1/2 Hex Bolt	2	
30	7248	Ground Drive Belt, Micro-V	1		F116	1/4-20 x 1-1/4 Hex Bolt	1	
31	7275-16	Universal Joint Tube Assembly / Spine	1		F121	5/16-18 x 3/8 x 1 SHL Bolt	1	
32	7275-9	Quick Coupler Installation Tool	1		F131	5/16-18 x 1/2 Hex Bolt	2	
33	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1		F168	5/16 Split Lock Washer	14	
34	8304	Brake Band (14-1/2)	1		F171	5/16-18 x 3/8 Set Screw	4	
35	6250-1	Drive Belt (3VX370)	1		F178	1/4 x 1 Fender Washer	1	
36	7236-1	PTO Drive Pulley (4-1/2/3V) (Includes Items # F168 & F226)	1		F182	1/4 x 5/8 x 1/8 Washer	2	
37	8237-2	Engine Pulley, Bolt On (4/3.8/3V) (Includes Items # F168 & F226)	1		F226	5/16-18 x 7/8 Hex Bolt	14	
38	8230	Engine PTO Belt	1		F241	.375 x .875 x .10 Washer	1	
Jackshaft Assembly						F255	5/16-18 x 1-1/2 Hex Bolt	2
39	7245-1	Idler Pulley (3/8 Groove)	1		F261	AN960616L Washer	1	
					F336	3/8-16 Jam Nut	1	
					F353	3/8-16 ESNA LP Nut	1	

* Service Part Only

MAIN COMPONENT POWER TRANSMISSION (SD MODELS)

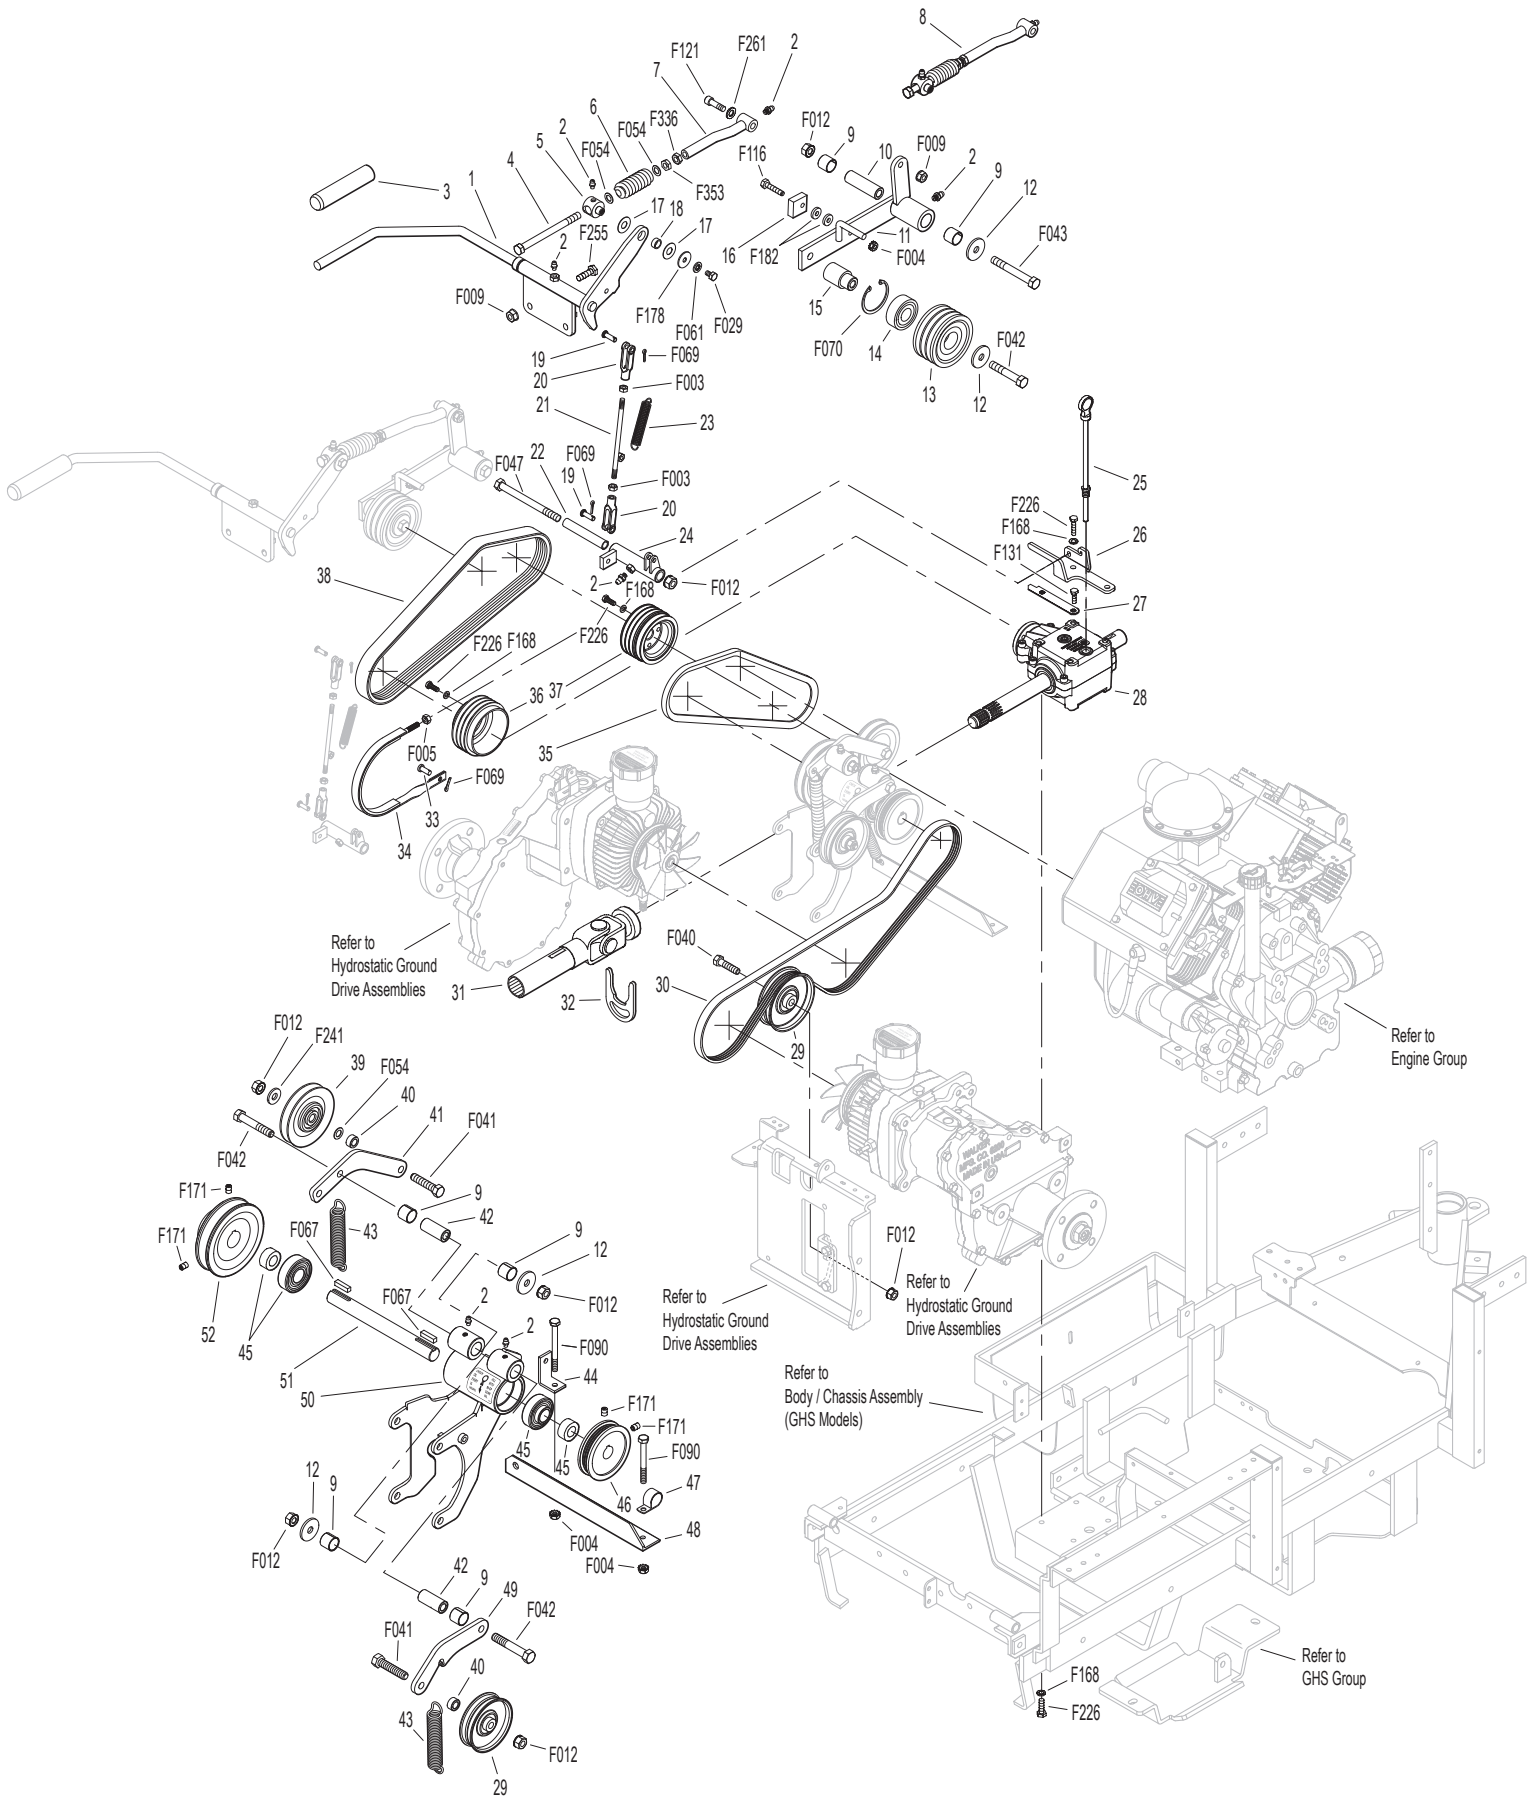


Beginning S/N 149093
Use only genuine Walker® replacement parts.

ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Precleaner Assembly				42	NS	Screw (Kohler M-645016-S)	2
1	7026-2	Remote Precleaner (Includes Item # 5)	1	43	NS	Gasket (Kohler)	2
2	7440	Shock Mount (1 x 3/4)	3	44	NS	Nut (Kohler)	4
3	7028-20	Rear Precleaner Mount	1	45	8013-9	Muffler	1
4	7032	Elbow, Precleaner	1	46	8013-2	Upright Support	1
5	7840-5	Hose Clamp (1-1/2" to 2")	5	47	8013-13	Muffler Heat Shield	1
6	5091-2	Air Flow Indicator (Vacuum 10" H2O)	1	48	8013-61	Muffler Heat Deflector W/Knurled Inserts	1
7	5088-12	Air Cleaner Assembly (Includes Items # 6, 9-13 & 17)	*	49	8013-29	Muffler Heat Shield Endcap	1
8	5088-3	Air Cleaner Band	1	50	8013-18	Muffler Brace	1
9	5090-3	Safety Filter Insert	1	51	8021	Engine Brace	1
10	5090-1	Air Cleaner Cartridge	1	Fasteners			
11	5088-5	Air Cleaner Draw Latch	2	F002	10-24 Keps Nut		2
12	5088-11	Air Cleaner Cap (Includes Item # 11)	1	F004	1/4-20 Keps Nut		6
13	5090-2	Vacuator Valve	1	F009	5/16-18 Whiz Locknut		11
14	8026-10	Air Hose, Cleaner	1	F012	3/8-16 Keps Nut		3
15	7031-3	Tube Support Arm	1	F025	10-24 x 3/8 PPHMS		2
16	7028-6	Precleaner Tube, GHS/SD	1	F026	10-24 x 1/2 PPHMS		3
17	5091-4	Indicator Nipple	1	F029	1/4-20 x 1/2 Hex Bolt		4
Engine Assembly				F031	1/4-20 x 5/8 Hex Bolt		3
18	NS	Fuel Pump (Kohler)	1	F038	3/8-16 x 1 Hex Bolt		3
19	5879-3	Hose Clamp (1/2)	4	F050	1/4 SAE Washer		4
20	NS	Fuel Line, Engine (Kohler)	*	F052	5/16 External Star Lock Washer		2
21	5020	Fuel Filter	*	F053	7/16 Int. Star Lock Washer		2
22	NS	Rectifier	*	F061	1/4 Internal Star Lock Washer		4
23	8016-4	Regulator Mount	1	F063	3/8 Internal Star Lock Washer		2
24	NS	Oil Filter (Kohler 1205001)	1	F079	A/A66D Aluminum Pop Rivet		2
25	NS	23 HP Kohler Engine	1	F090	1/4-20 x 2-1/2 Hex Bolt		1
26	5845	Rubber Bumper (1.50 x 1.25)	1	F091	5/16-18 x 5/8 Hex Bolt		2
27	8010-2	Engine Bumper Mount	1	F106	3/8-16 x 5/8 Hex Bolt		2
28	5832	Cable Clamp (1/2)	3	F120	AN960416 Washer		2
Fuel Tank Assembly				F129	10-24 x 1/2 PTHMS		1
29	M246	Fuel Line, Tank (1/4 x 20-1/2")	1**	F132	1/4-20 x 2-3/4 Hex Bolt		1
30	5083-1	Bushing, Rubber	1	F140	7/16-14 x 1 Hex Bolt		2
31	M113	Fuel Line (3/16 x 28")	1**	F175	1/2 Split Lock Washer		4
32	5086-7	Hose (1/4 x 6)	1	F255	5/16-18 x 1-1/2 Hex Bolt		2
33	8023	Fuel Tank Support	1	F256	7/16 SAE Washer		2
34	5020-2	Fuel Filter, In Tank	1	F273	M6 x 1.0 Nut		4
35	8055-1	Fuel Tank, 4.7 Gallon, Gas (Black) (Includes Items # 30, 32, 34 & 37-40)	1	F285	1/2-13 x 1-1/2 Hex Bolt		4
36	5082-4	2-1/4 Ratchet Fuel Cap	*	F324	M8 x 1.25 x 12 Hex Bolt		2
37	8055-2	Fuel Tank Gauge	1	F547	M6 x 1.0 x 45 Stud		2
38	5977-7	Roll Over Grommet (.900 x 1-1/2)	1	* Service Part Only			
39	8043-8	Roll Over Valve	1	** Required hose specifications:			
40	5083-8	Tank Tube (13")	1	M113 - 3/16" ID fuel/oil/vapor hose (Gates 4219-0093 or equivalent)			
Exhaust Assembly				M246 - 1/4" ID low permeation (<15g/m ² /day) fuel hose (Parker 38904 or equivalent)			
41	8530-8	Muffler Grass Shield (Includes Items # F002 & F025)	1	NOTE: Refer to Kohler Engine Decal (NS) for Engine Identification Number.			

ENGINE GROUP

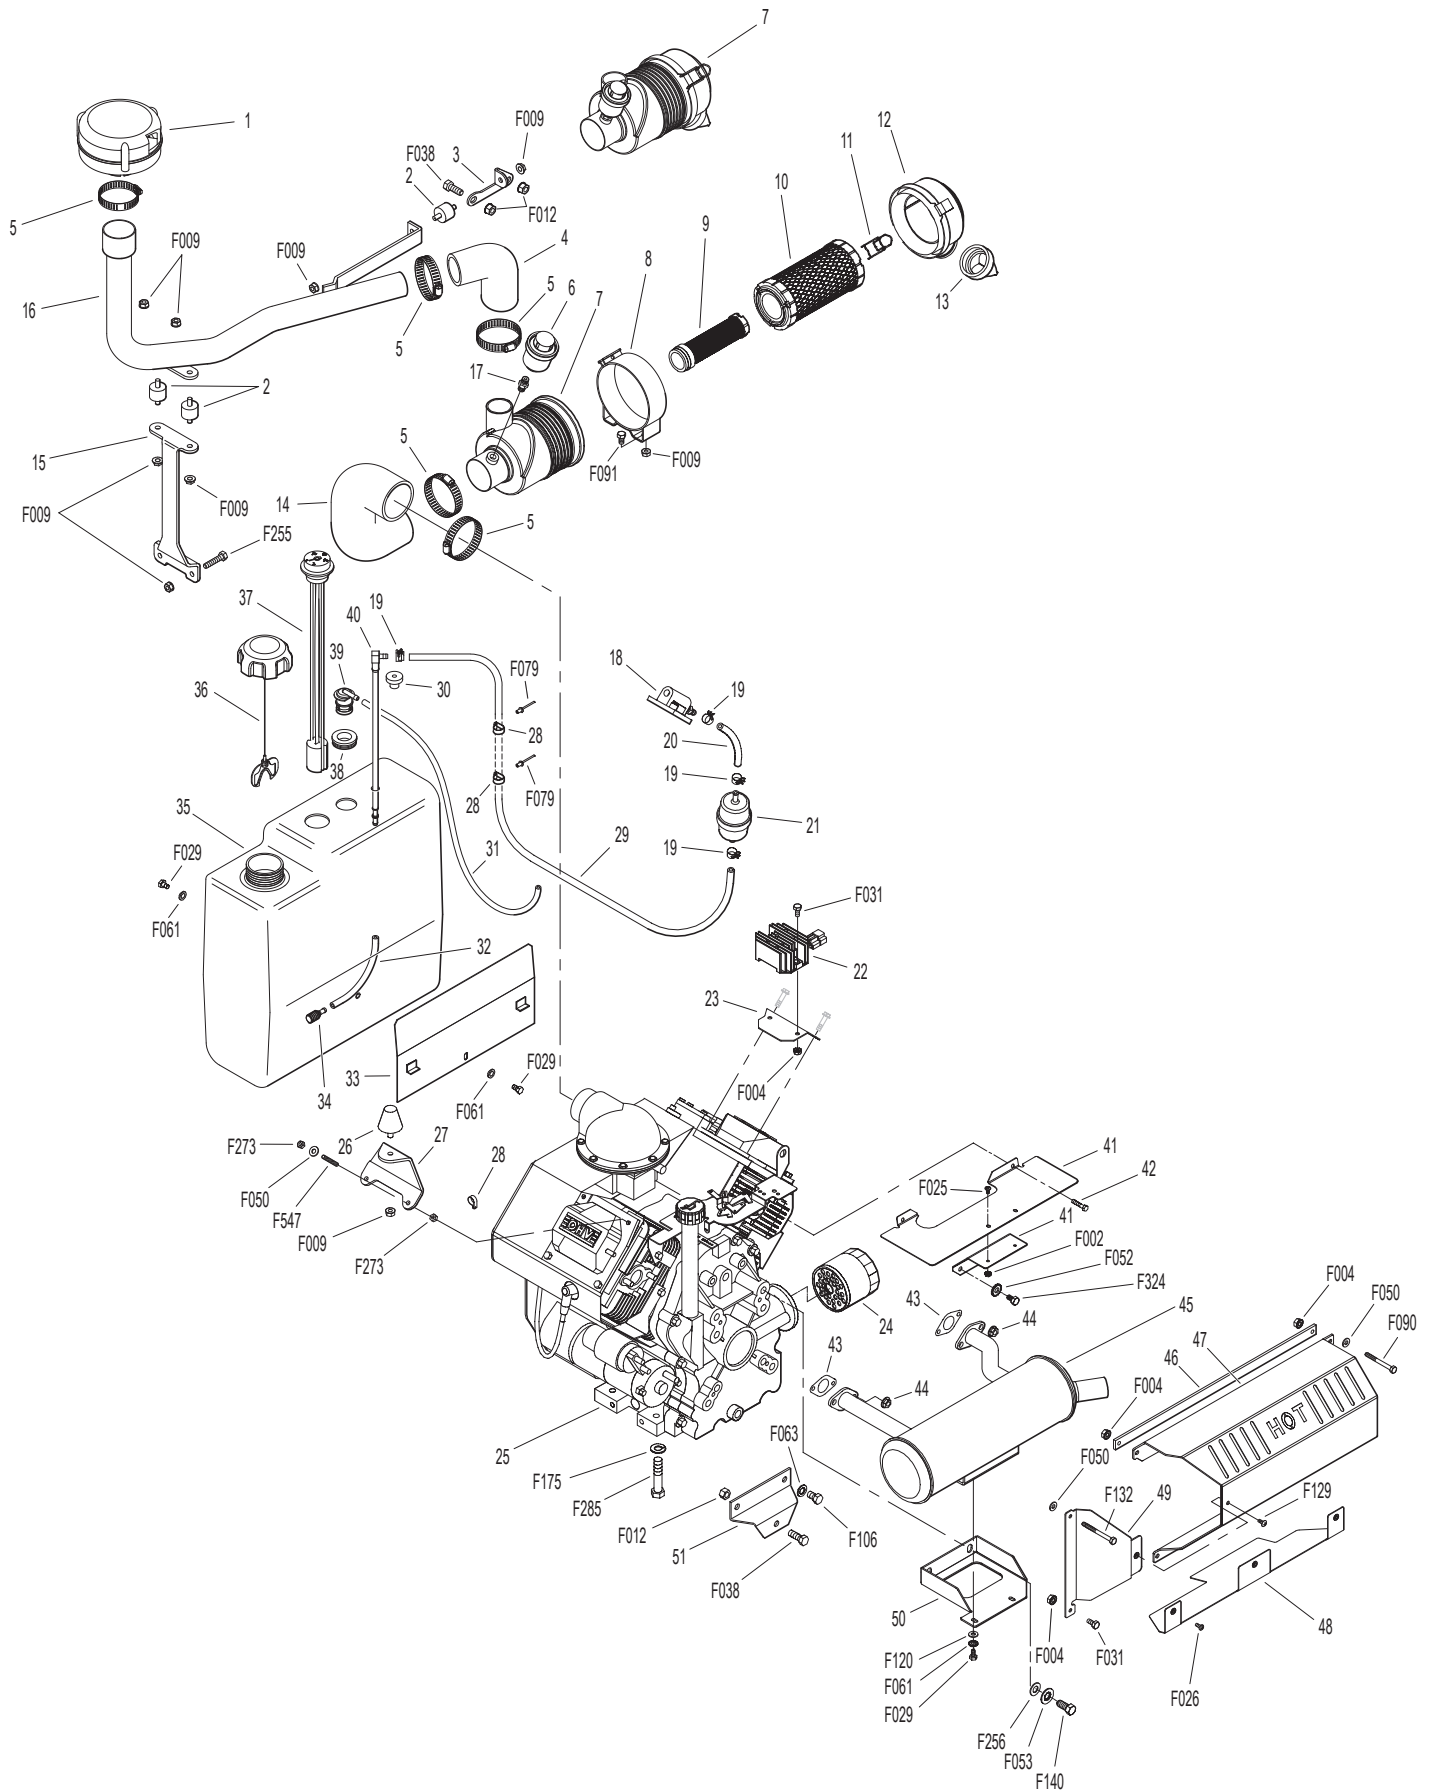


Beginning S/N 149093
Use only genuine **Walker**® replacement parts.

HYDROSTATIC GROUND DRIVE ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transmission Lockout Assembly				Transmission Repair Parts			
1	5028-3	Transmission Lockout Assembly (Includes Items # 2-5, F023, F027 & F081)	*	27	5025-13	Hydro Input Shaft (Includes Items # 28-30)	*
2	5847	Plastic Tip	2	28	5025-8	Bearing, Input Shaft	*
3	5057	Lockout Cam (Includes Item # F081)	2	29	5025-7	Snap Ring	*
4	5028-5	Lockout Lever	2	30	NS	Seal, Input Shaft	*
5	5027-5	Lockout Mount	1**	31	5022	Reservoir to Casting Gasket	*
Ground Drive Assemblies				32	5024	Reservoir Cap and Gasket	*
6	6209-5	Bridge Assembly	1	33	5023	Transmission Reservoir Kit	*
7	6209-10	Idler Pulley Mount	1	34	5023-1	Rubber Bladder	*
8	6243-2	Hydro Fan, CCW	1	35	5025-6	O-Ring & Plug Assembly	*
9	5026	Hydrostatic Drive, CW	1	36	5025-3	Seal, Control Shaft	*
10	6206-1	Air Vent Valve	*	Fasteners			
11	6200-9	Gear Axle Drive Assembly (Includes Items # 10 & 12)	2	F009	5/16-18 Whiz Locknut		2
12	6207-12	Pipe Plug (1/4 NPTF)	*	F012	3/8-16 Keps Nut		2
13	5126	Cable Retainer (Uses existing bolt on Gear Axle Drive Assembly)	1	F023	10-24 ESNA Nut		2
14	6233-1	Pinion Gear	2	F027	10-24 x 5/8 PPHMS		2
15	6234	Spacer, Pinion Gear	2	F034	5/16-18 x 3/4 Hex Bolt		2
16	6201	O-Ring Seal	2	F036	1/4-20 x 1/2 SBH Screw		2
17	7244	Hydro Pulley (3-7/8/MV) (Includes Items # F064 & F359)	2	F040	3/8-16 x 1-1/2 Hex Bolt		4
18	6243-1	Hydro Fan, CW	1	F043	3/8-16 x 3 Hex Bolt		6
19	5025	Hydrostatic Drive, CCW	1	F053	7/16 Internal Star Lock Washer		4
Deck Support Arm Assemblies				F063	3/8 Internal Star Lock Washer		16
20	6430-10	Outboard Mount, LH	1	F064	1/8 x 1/2 Woodruff Key (#3)		4
21	6431-1	Deck Support Arm, LH (Includes Item # 25)	1	F081	A/A45D Aluminum Pop Rivet		2
22	5775-2	Hitch Pin (# 6)	2	F160	External Snap Ring (.669 Shaft)		2
23	6431-2	Deck Support Arm, RH (Includes Item # 25)	1	F178	1/4 x 1 Fender Washer		2
24	6430-9	Outboard Mount, RH	1	F194	7/16 x 1-1/4 x 1/8 Washer		2
25	5830	Grease Fitting	2	F200	7/16-20 x 3 Grade 8 Bolt		2
26	6840-1	Support Arm Bushing (2-1/16)	2	F244	7/16-20 x 3/4 Hex Bolt		2
				F262	3/8-16 x 4 Hex Bolt All Thread		2
				F359	5/16-18 x 5/16 Set Screw (Unbrako Knurl Point)		4
				F579	3/8-16 x 1 Hex Bolt Grade 8		4
				* Service Part Only			
				** Part not used on Jackshaft side of tractor.			

HYDROSTATIC GROUND DRIVE ASSEMBLIES

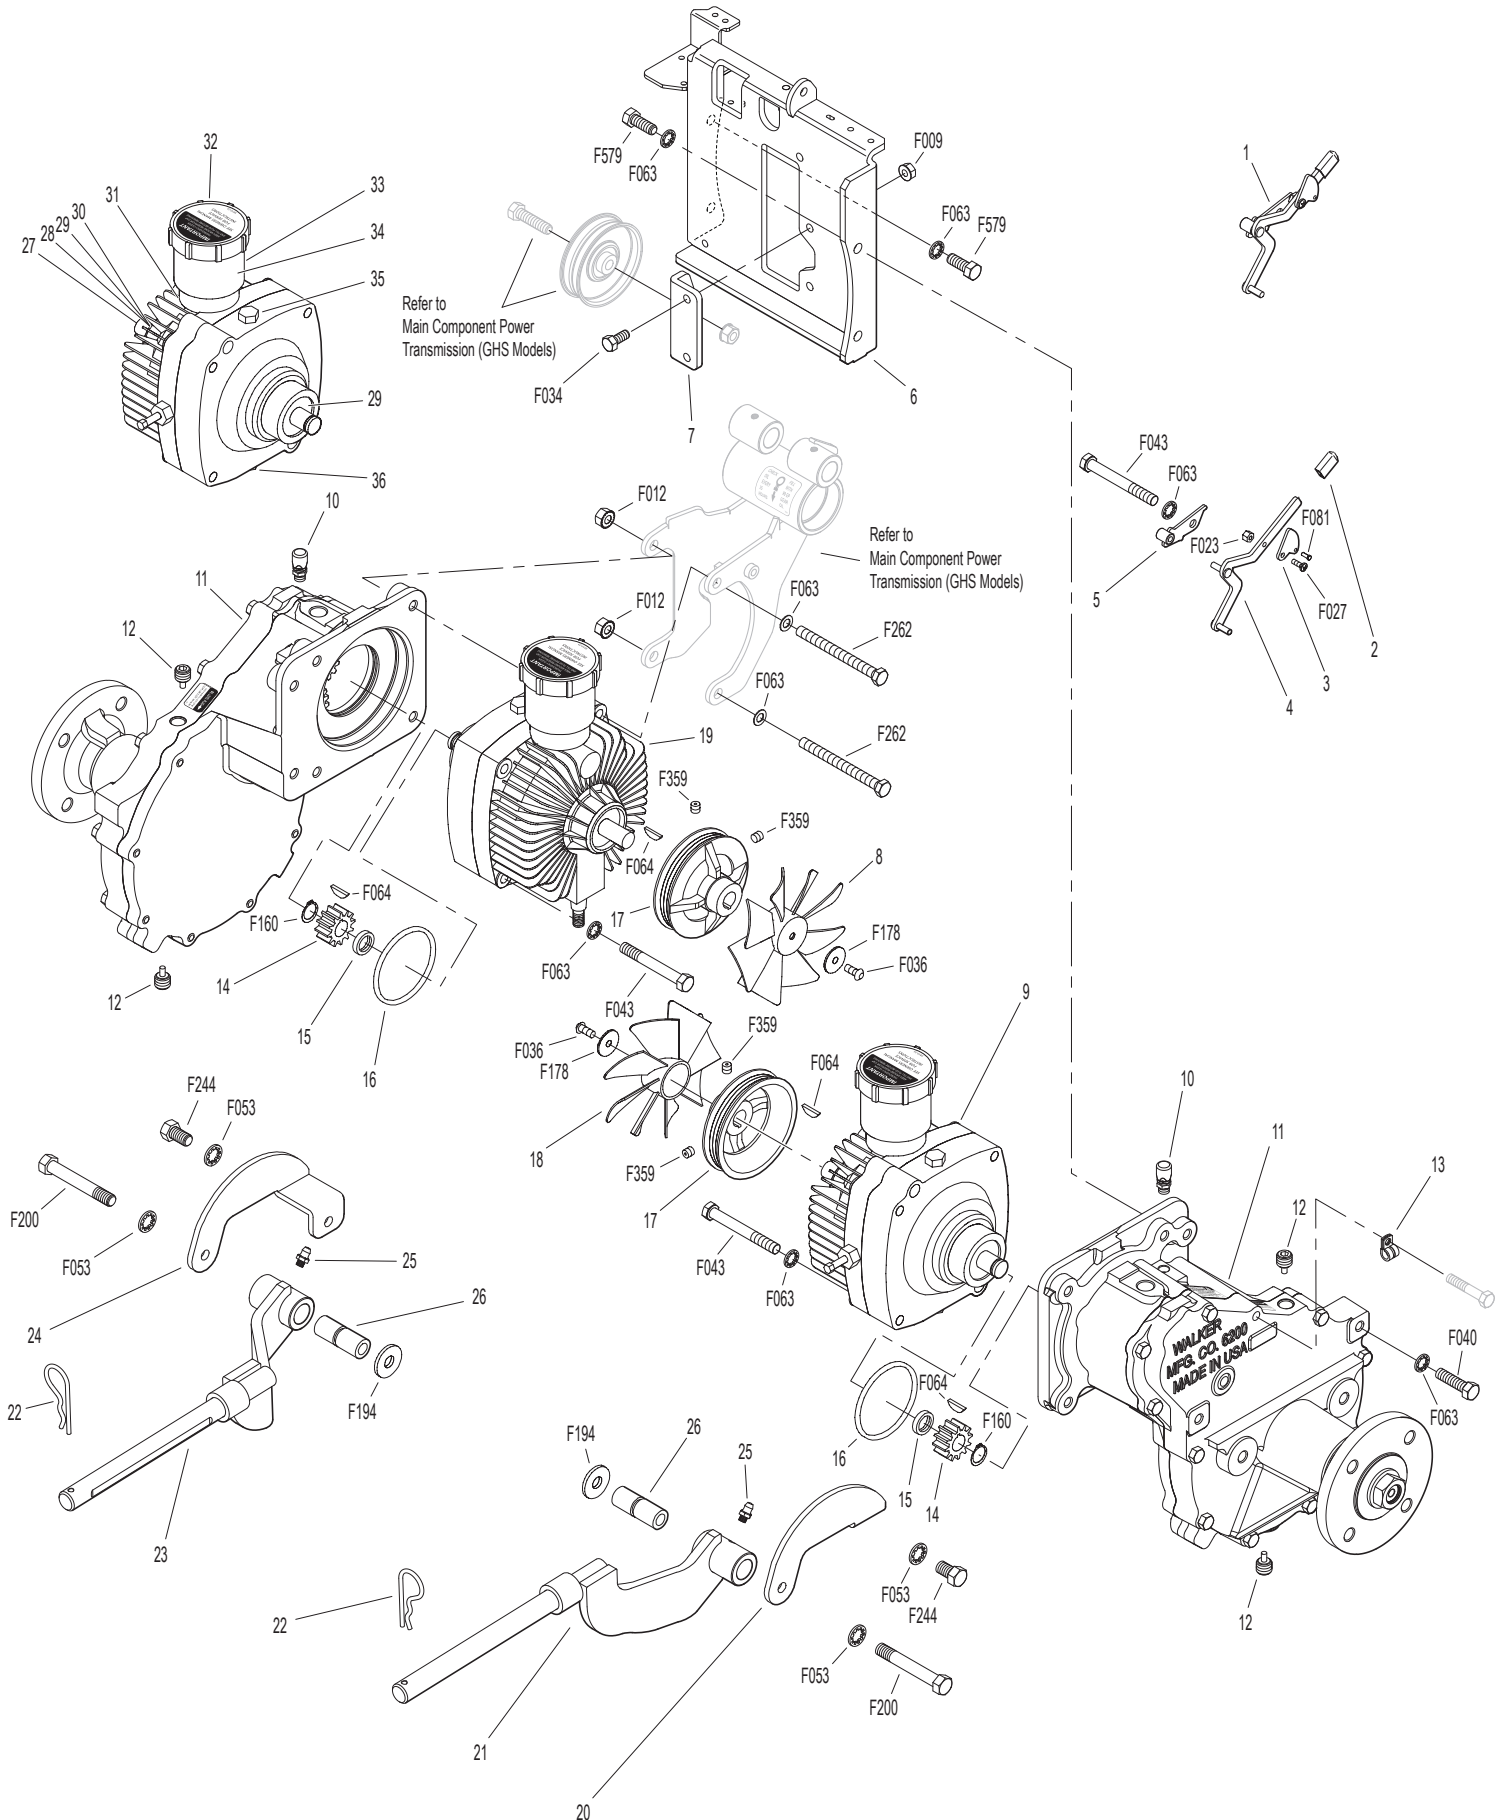

Beginning S/N 149093
Use only genuine **Walker**® replacement parts.

STEERING CONTROL ASSEMBLIES


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transmission Spring Assemblies				Steering Lever Assemblies			
1	6201-2	Shock Mount Gear Drive, RH	1	32	5850-2	Handle Grip, Foam (5-1/2)	2
2	5146	10mm Ball Stud	4	33	5223	Extension Spring (1/4 x 5-1/2)	2
3	5199-3	Steering Lever Dampener Assembly	2	34	5450	D-Clip	2
4	6201-1	Shock Mount Gear Drive, LH	1	35	5451-11	Steering Lever Assembly, LH / Adjustable (Includes Items # 9-11, 16, F034 & F582)	1
5	5214-2	Ball Joint (5/16-24) Nylon Lined	2	36	5391-3	Steering Lever Support	1
6	6212-6	Transmission Control Arm, LH	1	37	5217	Pivot Pin, Steering Lever	1
7	5213-3	Control Rod (6")	1	38	5453-10	Steering Lever Handle, Adjustable (Includes Items # 32 & F345)	2
8	5665-1	Compression Spring (2-1/2)	2	39	5450-11	Steering Lever Assembly, RH / Adjustable (Includes Items # 9-11, 16, F034 & F582)	1
9	7201-2	Fiberglide Bearing 1/2"	2	Fasteners			
10	5463-5	Steering Arm Pivot Bushing (SS)	2	F004	1/4-20 Keps Nut		4
11	5463-4	Steering Lever Actuator	2	F007	5/16-18 Jam Nut		1
12	5213-4	Control Rod (14-3/4")	1	F008	5/16-24 Keps Nut		2
13	5212-6	Transmission Control Arm, RH	1	F009	5/16-18 Whiz Locknut		7
Forward Speed Control Assemblies				F010	5/16-24 ESNA Nut		2
14	5862	FSC Knob	1	F012	3/8-16 Keps Nut		2
15	7170-1	FSC Lever Assembly (Includes Item # 16)	1	F024	5/16-24 Jam Nut		4
16	5830	Grease Fitting	6	F029	1/4-20 x 1/2 Hex Bolt		2
17	5975-3	Cable Tie (50# x 7")	1	F032	1/4-20 x 3/4 Hex Bolt		2
18	5214-4	Ball Joint (5/16-24) W/O Stud	2	F034	5/16-18 x 3/4 Hex Bolt		4
19	5219	Extension Spring (3/4 x 6-3/4)	1	F038	3/8-16 x 1 Hex Bolt		2
20	5172	Bearing, Delrin (.255 x .379 x .250)	2	F050	1/4 SAE Washer		1
21	5141-1	FSC Actuator Block	1	F051	3/8 SAE Washer		2
22	5140-9	FSC Brace	1	F064	1/8 x 1/2 Woodruff Key (#3)		2
23	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	2	F068	1/8 x 1 Cotter Pin		1
24	5142-8	FSC Key	1	F069	3/32 x 1/2 Cotter Pin		1
	5140-12	FSC Control Assembly (Includes Items # 16, 23-25, 28, F182, F192 & F193)	*	F093	5/16-18 x 1 Hex Bolt		1
25	5140-30	FSC Friction Body (Includes Item # 16)	1	F146	1/4-20 Jam Nut		1
26	5141-2	FSC Actuator Rod	1	F182	1/4 x 5/8 x 1/8 Washer		1
27	5281-5	Clevis Pin (1/4 x 0.80)	1	F183	.312 x .700 x .074 Washer		3
28	5142-9	FSC Actuator Cam	1	F186	5/64 x 1/2 Cotter Pin		1
29	5141-3	Spacer	1	F188	1/4-20 Self-Locking Nut		4
30	5141-4	FSC Rod	1	F192	3/8-24 Self-Locking Nut		1
31	5470-2	Speed Control Stop	1	F193	3/8 Belleville Spring Washer		3
				F198	.250 x .625 x .040 Washer, SS		2
				F226	5/16-18 x 7/8 Hex Bolt		1
				F316	5/16-18 x 1-3/4 Hex Bolt		1
				F345	1/4-20 x .770 Knurled Bolt		4
				F350	1/4-20 LP Nylock		1
				F353	3/8-16 ESNA LP Nut		2
				F401	.504 x .751 x .030 Washer		1
				F582	Washer 5/16 x 7/8 x .125		2

* Service Part Only

THROTTLE & CHOKE CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Throttle & Choke Control Assemblies				Fasteners			
1	8121-1	Throttle Cable	1		F002	10-24 Keps Nut	4
2	8122-1	Choke Cable	1		F005	1/4-20 ESNA Nut	2
3	5172	Bearing, Delrin (.255 x .379 x .250)	2		F025	10-24 x 3/8 PPHMS	4
4	5108-7	Control Lock Tab	2		F050	1/4 SAE Washer	2
5	5108-10	Friction Washer (.125)	2		F164	10-24 x 1/4 x 3/8 SHL Bolt	2
6	5108-1	Control Lever, Throttle & Choke	2		F201	1/4 Belleville Spring Washer	4
7	5108-5	Throttle Control Knob, Red	1				
8	5108-11	Friction Washer (.062)	2	*		Service Part Only	
9	5108-8	Control Bracket	2				
10	7108	Control Assembly (Includes Items # 4-6, 8, 9 & F201)	2				
	8121	Throttle Control and Cable Assembly (Includes Item # 7)	*				
	8122	Choke Control and Cable Assembly (Includes Item # 11)	*				
11	5108-6	Choke Control Knob, Black	1				
12	8123	Insulation Sleeve (3/8 x 6)	1				
13	5975-1	Cable Tie (18# x 3-3/4")	1				


THROTTLE & CHOKE CONTROL ASSEMBLIES

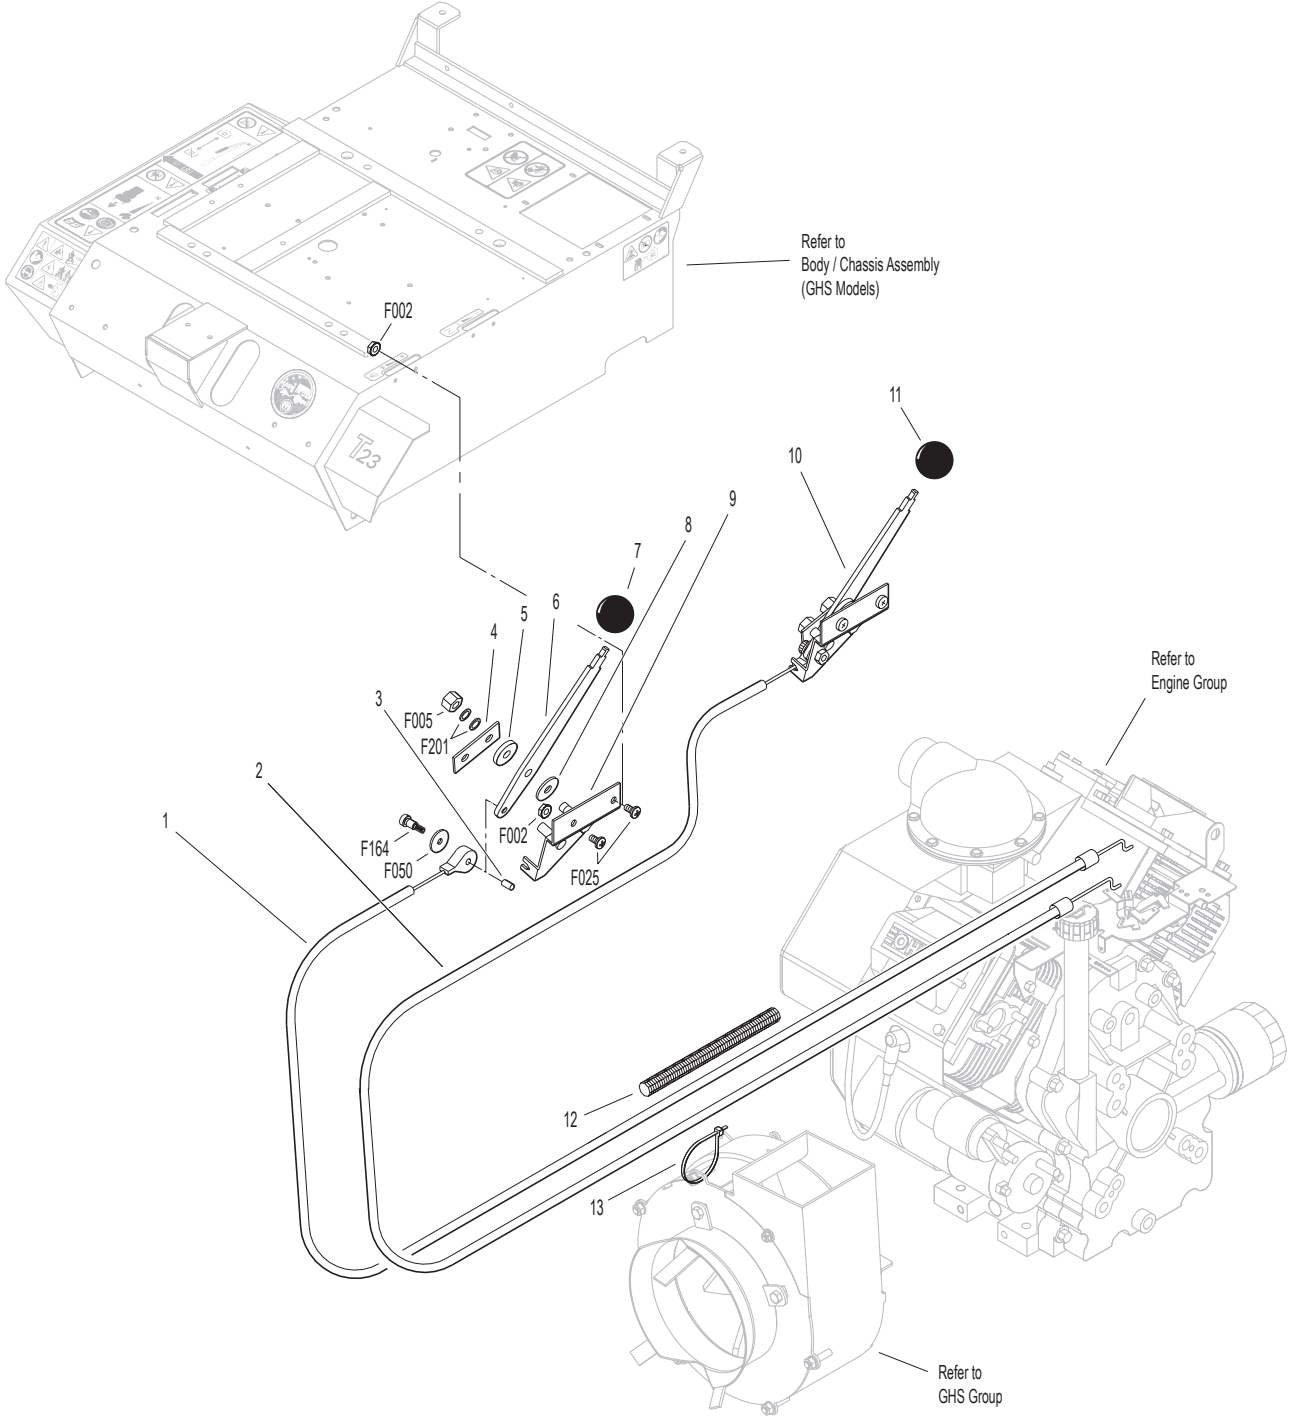

PARKING BRAKE ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Parking Brake Assembly				Fasteners			
1	7406-1	Handle Grip, Red	1	F002		10-24 Keps Nut	2
2	7406-8	Parking Brake Lever (4-1/4)	1	F003		1/4-28 Hex Nut	1
3	7406-2	Lever Mount	1	F004		1/4-20 Keps Nut	4
4	5830	Grease Fitting	1	F025		10-24 x 3/8 PPHMS	2
5	7407	Clevis Pin (3/16 x 1/2)	2	F029		1/4-20 x 1/2 Hex Bolt	3
6	7404-6	Brake Actuator Arm	2	F032		1/4-20 x 3/4 Hex Bolt	1
7	7405	Pin, Transmission Lock	2	F054		AN960616 Washer	2
8	7402	Clevis	2	F072		1/4 "E" Retainer Ring	2
9	7408	Compression Spring (1/2 x 3/4)	2	F086		#10 SAE Washer	4
10	7415	Rubber Dust Shield (5/8 x 3/8 x 1/32)	2	F109		1/8 x 5/8 Roll Pin	2
11	5567-3	O-Ring Seal (1/4 x 3/8)	4	F111		1/8 x 3/4 Cotter Pin	1
12	7403	Plunger Bushing, Gear Axle	2	F112		5/8 x 1-1/4 x .03 Washer	2
13	7404-7	Brake Actuator Mount	2	F127		1/16 x 1/2 Cotter Pin	4
14	7412	Clevis Pin (3/16 x 5/8)	2	F261		AN960616L Washer	5
15	5833	Cable Clamp (1/4)	2	F287		1/4-28 Keps Nut	1
16	7410	Brake Control Cable, LH (25.5")	1				
17	7409	Brake Control Cable, RH (20.5")	1				
18	7401-3	Cable Mount Bracket	1				
19	7401-1	Cable Pull Rod	1				
20	5552	Ball Joint (1/4-28)	1				


PARKING BRAKE ASSEMBLY

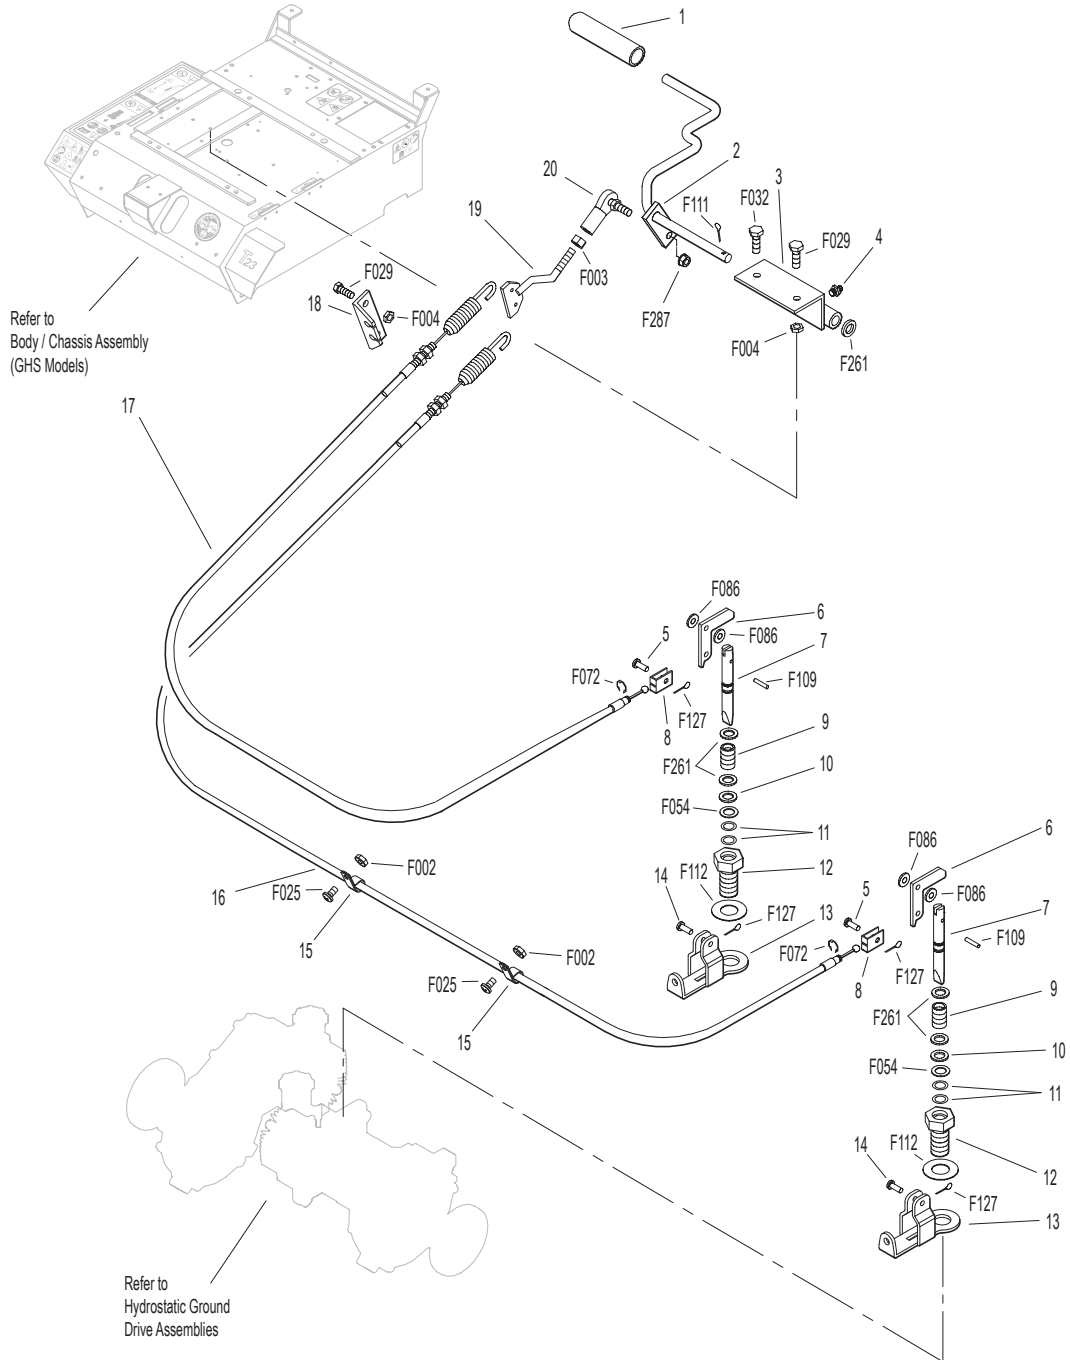

GHS GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Delivery Chute Assembly				Fasteners			
1	5515-4	Elbow Delivery Spout	1	F002		10-24 Keps Nut	6
2	5592-24	Backing Plate, Grass-Pak® Switch	1	F004		1/4-20 Keps Nut	3
3	5592-23	Grass-Pak® Housing Spacer	1	F009		5/16-18 Whiz Locknut	7
4	5578	Rear Clip, Chute Mount	1	F012		3/8-16 Keps Nut	3
5	5577	Side Clip, Chute Mount	2	F029		1/4-20 x 1/2 Hex Bolt	3
6	8511-1	Delivery Chute W/Clips / 10.0 (Includes Items # 4, 5, 7, F362 & F411)	1	F034		5/16-18 x 3/4 Hex Bolt	1
7	5578-10	Front Clip, Chute Mount	1	F039		3/8-16 x 1-1/4 Hex Bolt	1
8	7530-4	Body Chute (10.5 Blower)	1	F040		3/8-16 x 1-1/2 Hex Bolt	1
				F042		3/8-16 x 2-1/4 Hex Bolt	1
				F050		1/4 SAE Washer	1
				F051		3/8 SAE Washer	1
				F054		AN960616 Washer	1
				F067		3/16 x 3/16 x 1 Key	1
				F075		5/16-18 x 1/2 SQH Set Screw	2
				F079		A/A66D Aluminum Pop Rivet	6
				F090		1/4-20 x 2-1/2 Hex Bolt	1
				F114		5/16-18 x 5/8 SQH Set Screw	2
				F128		10-24 x 3/8 PTHMS	4
				F131		5/16-18 x 1/2 Hex Bolt	3
				F132		1/4-20 x 2-3/4 Hex Bolt	1
				F168		5/16 Split Lock Washer	3
				F217		7/16-14 Hex Nut	1
				F218		7/16 Split Lock Washer	1
				F231		1/4 x 3/4 Woodruff Key (# 806)	1
				F281		7/16-14 x 1-3/4 Hex Bolt	1
				F362		A/A62D Alum. Pop Rivet (3/16D x 13/32L)	2
				F411		3/16 Bulbex Rivet	6
				F426		1/4-20 x 1/2 Carriage Bolt	1
				F577		10-24 x 5/8 Carriage Bolt	2
Blower Belt Tightener Assembly							
9	7238-6	Blower Drive Pulley (Includes Items # F075, F114 & F231)	1				
10	7234-2	Blower Belt (Micro-V)	1				
11	7239-1	Blower Pulley (Mirco-V) (Includes Items # F067, F075 & F114)	1				
12	7364-2	Torsion Spring	1				
13	7201-3	Fiberglide Bearing	2				
14	5830-3	Grease Fitting (45 Deg.)	1				
15	7364-1	Blower Belt Tightener Arm	1				
16	7201-4	Inner Race (1-1/2)	1				
17	5841	Retainer Washer (3/8 x 1-1/4)	1				
18	5245	Idler Pulley (3")	1				
Blower Assembly							
19	7544	Blower Assembly (10.5") (Includes Items # 20-25, F004, F009, F029, F050, F131, F168 & F426)	1				
20	5268	Bearing W/Collar (3/4)	2				
21	7544-3	Blower Housing (10.5)	1				
22	7545-2	Blower Output Shaft (10.5)	1				
23	7545	Blower Wheel (10.5")	1				
24	7543-1	Blower Faceplate (10.5)	1				
25	7526	Intake Tube (10.5 Blower)	1				
26	5595-2	Intake Cover / GHS	1				
27	7528-5	Skid Bar	1				

GHS GROUP

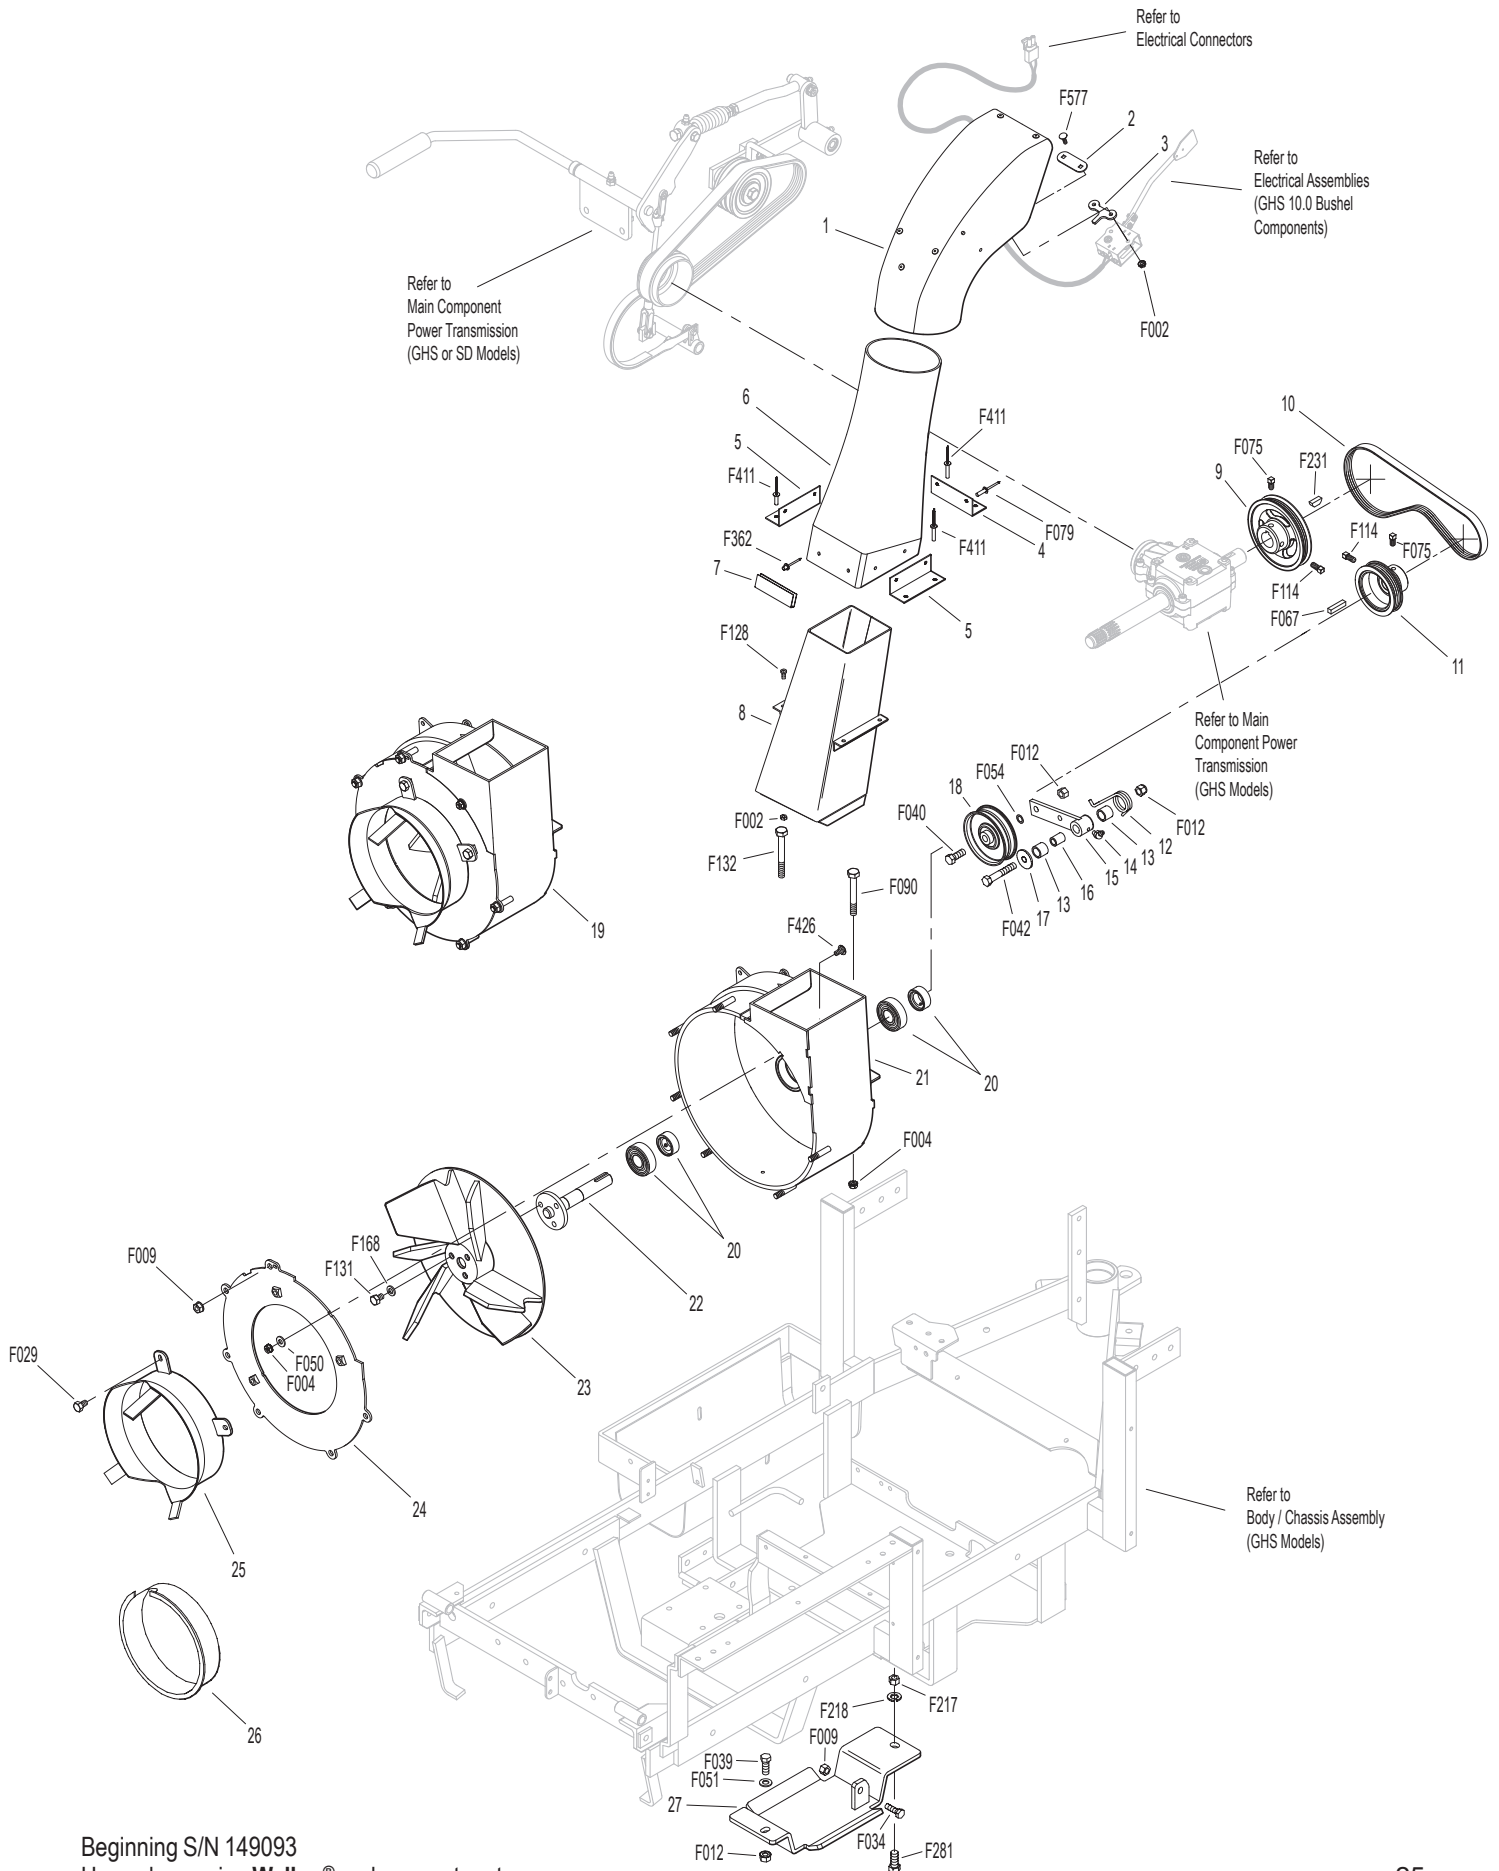


Beginning S/N 149093
 Use only genuine **Walker**® replacement parts.

GHS POWERFIL® ASSEMBLY (10.0)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
10.0 GHS Powerfil® Assembly				Fasteners			
1	5551-3	Bearing Cap, Powerfil®	1	F002		10-24 Keps Nut	10
2	5551-1	Pivot Bearing (#S3PP)	2	F003		1/4-28 Hex Nut	3
3	5518-2	Pivot, Delivery Spout	1	F026		10-24 x 1/2 PPHMS	1
4	5517-2	Pivot Mount	1	F037		10-24 x 5/8 PTH Screw	2
5	5552	Ball Joint (1/4-28)	2	F054		AN960616 Washer	1
6	5558-1	Powerfil® Push Rod	1	F085		3/16 Rivet Backup Washer	1
7	5553-3	Bushing, Powerfil® Actuator	4	F101		10-24 x 1-1/4 SHC Screw	1
8	5553-1	Compression Spring (1/2 x 2)	2	F109		1/8 x 5/8 Roll Pin	1
9	5558-2	Powerfil® Actuator Rod	1	F129		10-24 x 1/2 PTHMS	6
	5549	Actuator Rod Assembly (Includes Items # 5-9 & F003)	*	F261		AN960616L Washer	1
10	5554	Actuator Arm	1	F287		1/4-28 Keps Nut	1
11	5519-3	Motor Mount Nut (5/8-24)	*	* Service Part Only			
12	5519-2	Motor Mount Washer	*				
13	5976-2	Grommet (3/16 x 3/4)	1				
14	5519-5	Actuator Motor (12V) (Includes Items # 11 & 12)	1				


GHS POWERFIL® ASSEMBLY (10.0)

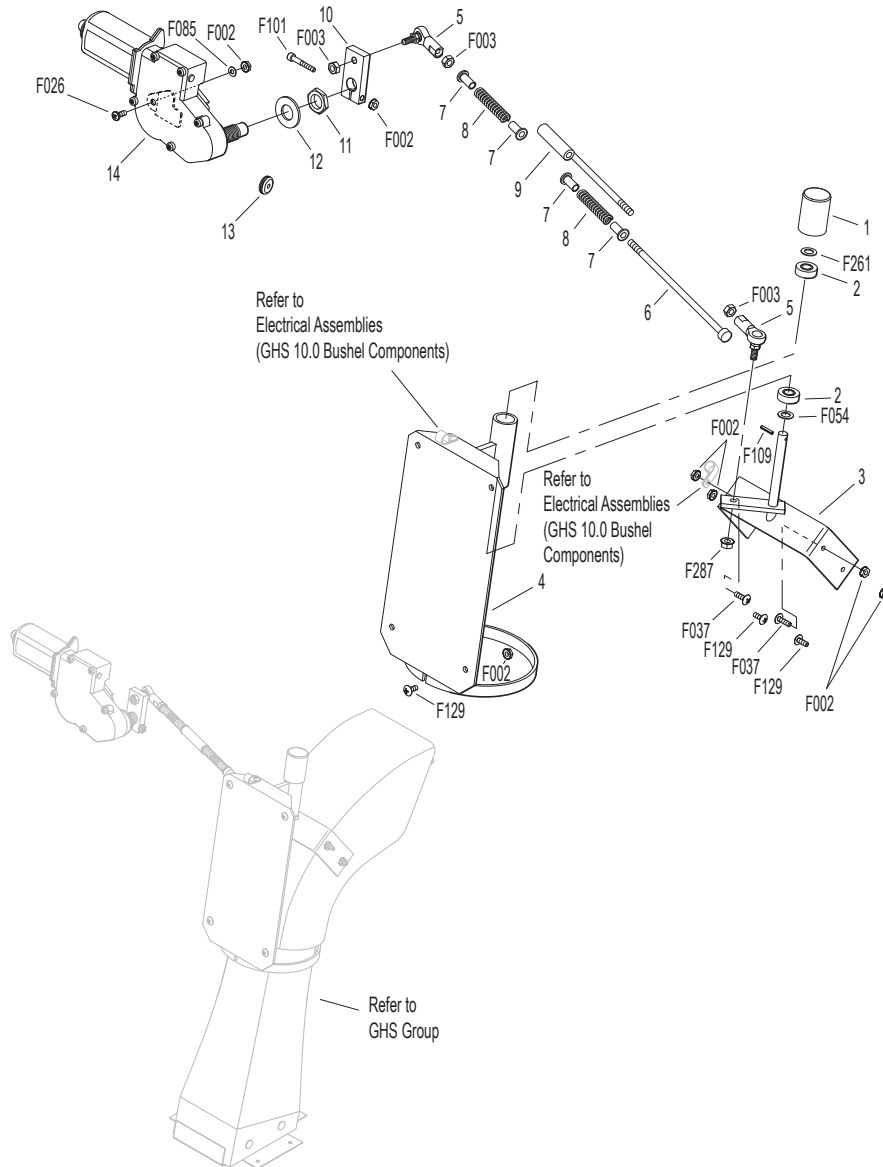

GHS 10.0 BUSHEL CATCHER ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Upper Baffle Screen Assembly (Removable)				45	8608-10	Box Support, Gas Spring	2
1	7512-2	Removable Screen (3/16 Hole) (Includes Items # 2, 5, F025 & F190)	1**	46	7532-1	Handle, Catcher Lift	2
2	7506	Knob / Threaded Insert (10-24)	2	47	5977-3	Grommet (9/16)	1
3	8606-3	Channel Top, LH	1	48	5976-2	Grommet (3/16 x 3/4)	1
4	8606-2	Channel Bottom	2	49	8117	Wire Harness Channel	1
5	7856-1	Edge Molding (26")	1	50	8602-3	10.0 Catcher W/O Powerfil®, Gray (Includes Door)	*
6	7507	Screen Seal (27-1/2)	1		8602-4	10.0 Catcher W/Powerfil®, Gray (Includes Door)	*
7	7505	Mustache Spring	2		8610-5	10.0 Bushel Catcher Box, Gray	*
8	8606	C-Channel (10.0)	1	51	8607-9	Powerfil® Cover Plate	1
	8606-20	C-Channel With Spring (10.0) (Includes Items # 7, 8 & F340)	*	52	8155-2	Gas Spring Cover, RH	1
9	8606-4	Channel Top, RH	1	53	8608-8	Hinge Plate, RH	1
10.0 Exhaust Deflector Door Assembly				54	8608-9	Torsion Bar	1
10	8607-16	Upper Seal Support	1	5598-2 Optional Dump Bag (Not Shown)			
11	8607-17	Upper Door Seal	1	May be ordered as an option. Contact your Walker dealer.			
12	8607-18	Backup Plate	1	Fasteners			
13	8512-4	10.0 Catcher Box Door, Gray (Includes Items # 10-14, 16, 17, F085, F330 & F411)	1	F002	10-24 Keps Nut		31
14	5583	Handle	1	F004	1/4-20 Keps Nut		25
15	8607-1	Door Mount, LH	1	F009	5/16-18 Whiz Locknut		4
16	8607-12	Upper Door Stiffener	1	F020	5/16-18 ESNA Nut		2
17	8607-7	Lower Door Stiffener	1	F024	5/16-24 Jam Nut		4
18	8607-8	Door Guide	1	F025	10-24 x 3/8 PPHMS		4
19	8607-2	Door Mount, RH	1	F026	10-24 x 1/2 PPHMS		2
GHS 10.0 Bushel Catcher Assembly				F027	10-24 x 5/8 PPHMS		6
20	8608-5	Center Strap	1	F029	1/4-20 x 1/2 Hex Bolt		10
21	8608-3	Upper Frame Doubler	2	F049	5/16 SAE Washer		8
22	8608-1	Outside Box Strap	2	F050	1/4 SAE Washer		2
23	8608-2	Lower Frame Doubler	2	F068	1/8 x 1 Cotter Pin		2
24	8608-4	Center Frame Doubler	1	F079	A/A66D Aluminum Pop Rivet		5
25	8608-11	Catcher Door Finger	1	F085	3/16 Rivet Backup Washer		4
26	8608-6	Catcher Mount	1	F094	8-32 x 1/2 PTHMS		6
27	8610-4	Catcher Dump Flap W/Plate 10.0	1	F129	10-24 x 1/2 PTHMS		17
28	8610-3	Backing Plate, Dump Flap	1	F190	#10 Internal Star Lock Washer		2
29	7584	Reinforcing Strap	1	F195	1/4-20 x 3/4 PPHMS, SS		4
30	5103-5	Pivot Bushing Inner	2	F196	1/4-20 x 1 PPHMS, SS		4
31	5801-3	Decal Plate, Round (Set of 2)	1	F208	5/16-18 x 2-1/4 Hex Bolt		2
32	7620-3	Pivot Bushing (1/2 x 9/16)	2	F230	1/4-20 x 1-1/4 PPHMS, SS		4
33	8608-7	Hinge Plate, LH	1	F242	1/4-20 x 7/8 PPHMS, SS		8
34	5103-7	Outside Torsion Bushing	2	F330	3/16D x 21/32L Rivet, SS		9
35	8607-4	Upper Arm	2	F340	Rivet, Aluminum		4
36	5214-12	Ball Joint (5/16-24)	4	F351	Aluminum Pop Rivet		6
37	5155-12	5/16 Ball Stud	2	F360	1/4-20 x 3/8 Hex Bolt		2
38	5155-4	Gas Spring	2	F390	1/4-20 x 7/8 Carriage Bolt		4
39	5147	Spring Clip	4	F411	3/16 Bulbex Rivet		21
40	8155-1	Gas Spring Cover, LH	1	F456	5/16-18 x 3/4 SBH Cap Screw, SS		4
41	8607-3	Lower Arm	2	F503	1/4-20 x 1-1/2 PPHMS, SS		1
42	5103-6	Pivot Bushing Outer	2	F524	3/16 x 3/8 Aluminum Rivet, Black		6
43	5155-13	3/4 Ball Stud	2	* Service Part Only			
44	5523-6	Gas Spring Plate	2	** This screen can be replaced by P/N 7512-3 Removable Screen (3/4" holes) for improved air flow performance in wet conditions.			

GHS 10.0 BUSHEL CATCHER ASSEMBLY

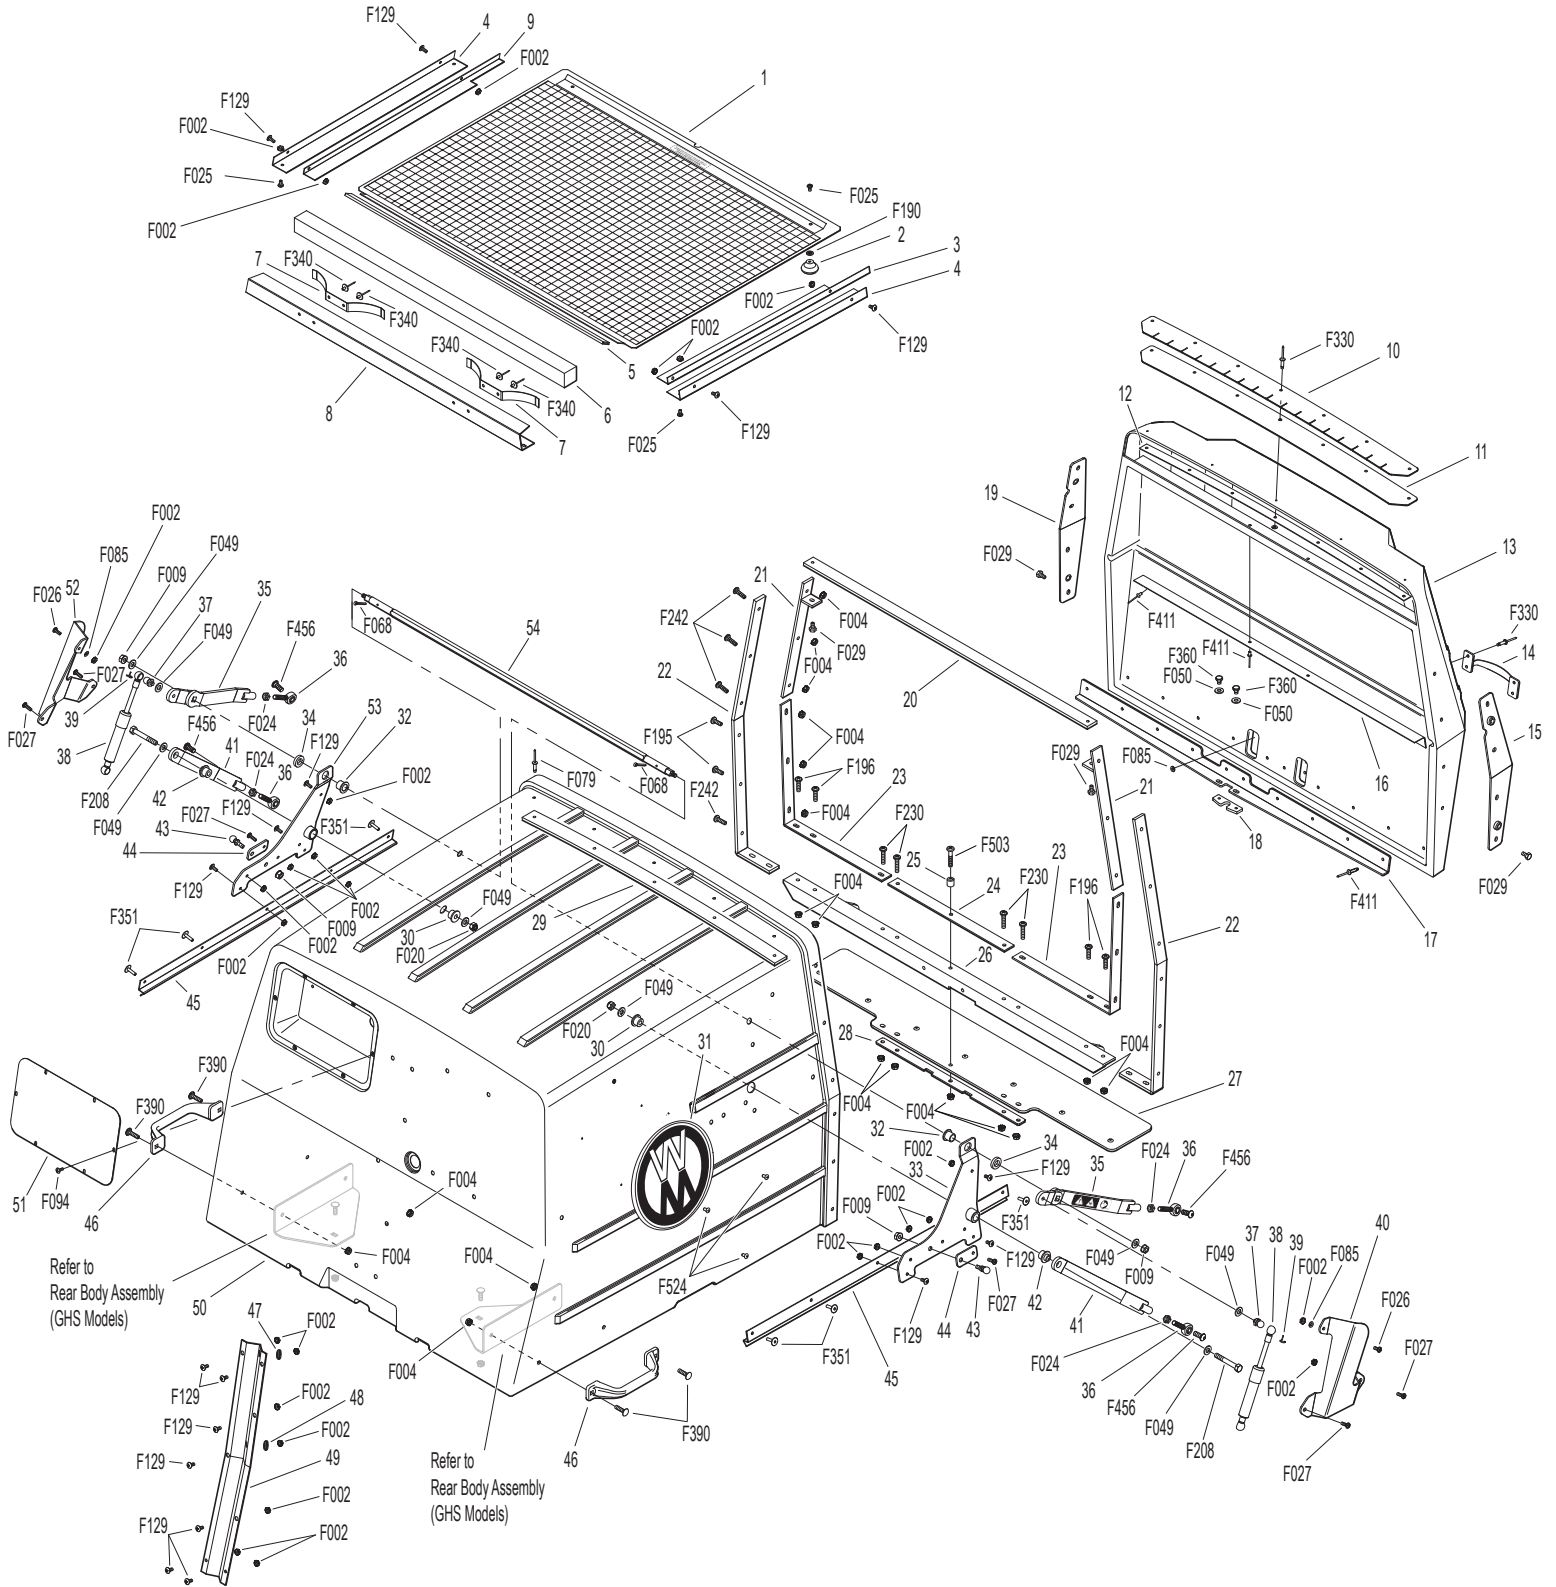


Beginning S/N 149093
 Use only genuine **Walker®** replacement parts.

INSTRUMENT PANEL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Instrument Panel Assembly				19	8536	Warning Horn	1
1	7307-2	Instrument Panel Cover (Optional)	**	20	8960-15	Ignition Switch (With Keys) (Includes Items # 22, 23 & F349)	1
	8306-4	Instrument Panel Assembly (Includes Items # 2-11, 13, 21-23, F228, F250, F251 & F349)	1	21	8996-9	Red Indicator Light Assembly	2
2	7307-7	Panel Frame	1	22	7854	Plastic Tip, Red	1
3	8820-5	Panel Faceplate W/Decal	1	23	8960-3	Key Set W/Umbrella	*
4	7386	Panel Gasket	1	Fasteners			
5	6942	Relay Switch 20/40 Amp (NC)	2		F004	1/4-20 Keps Nut	6
6	7941-3	Boot, Circuit Breaker	1		F228	#6 x 5/8 PPHSMS, SS	8
7	7941-5	Circuit Breaker (7 Amp)	1		F238	J Clip, Instrument Panel	8
8	5995-2	Switch Boot	1		F250	6-32 x 1/2 PPHMS	2
9	5995	Toggle Switch (Off-On)	1		F251	6-32 Keps Nut	2
10	8997	Voltmeter Gauge	1		F349	Washer .835 ID 1.122 OD, SS	1
11	8990-1	Hourmeter (Global)	1	* Service Part Only			
12	5975-1	Cable Tie (18# x 3-3/4")	2	** May be ordered as an option. Contact your Walker dealer.			
13	8945-3	Wire Harness, Instrument Panel	1	NOTE: Refer to ELECTRICAL CONNECTORS , Page 36 for identification of all Electrical Wiring Service Parts.			
14	7307-16	Lining, Panel Box (1/8)	1				
15	7391	Panel Box Mount Plate	2				
16	7977-1	Grommet (1/8 x 1-1/16)	1				
17	7307-1	Shock Mount (1.0 x .25)	3				
18	8385	Panel Box W/Graphic	1				

INSTRUMENT PANEL ASSEMBLY

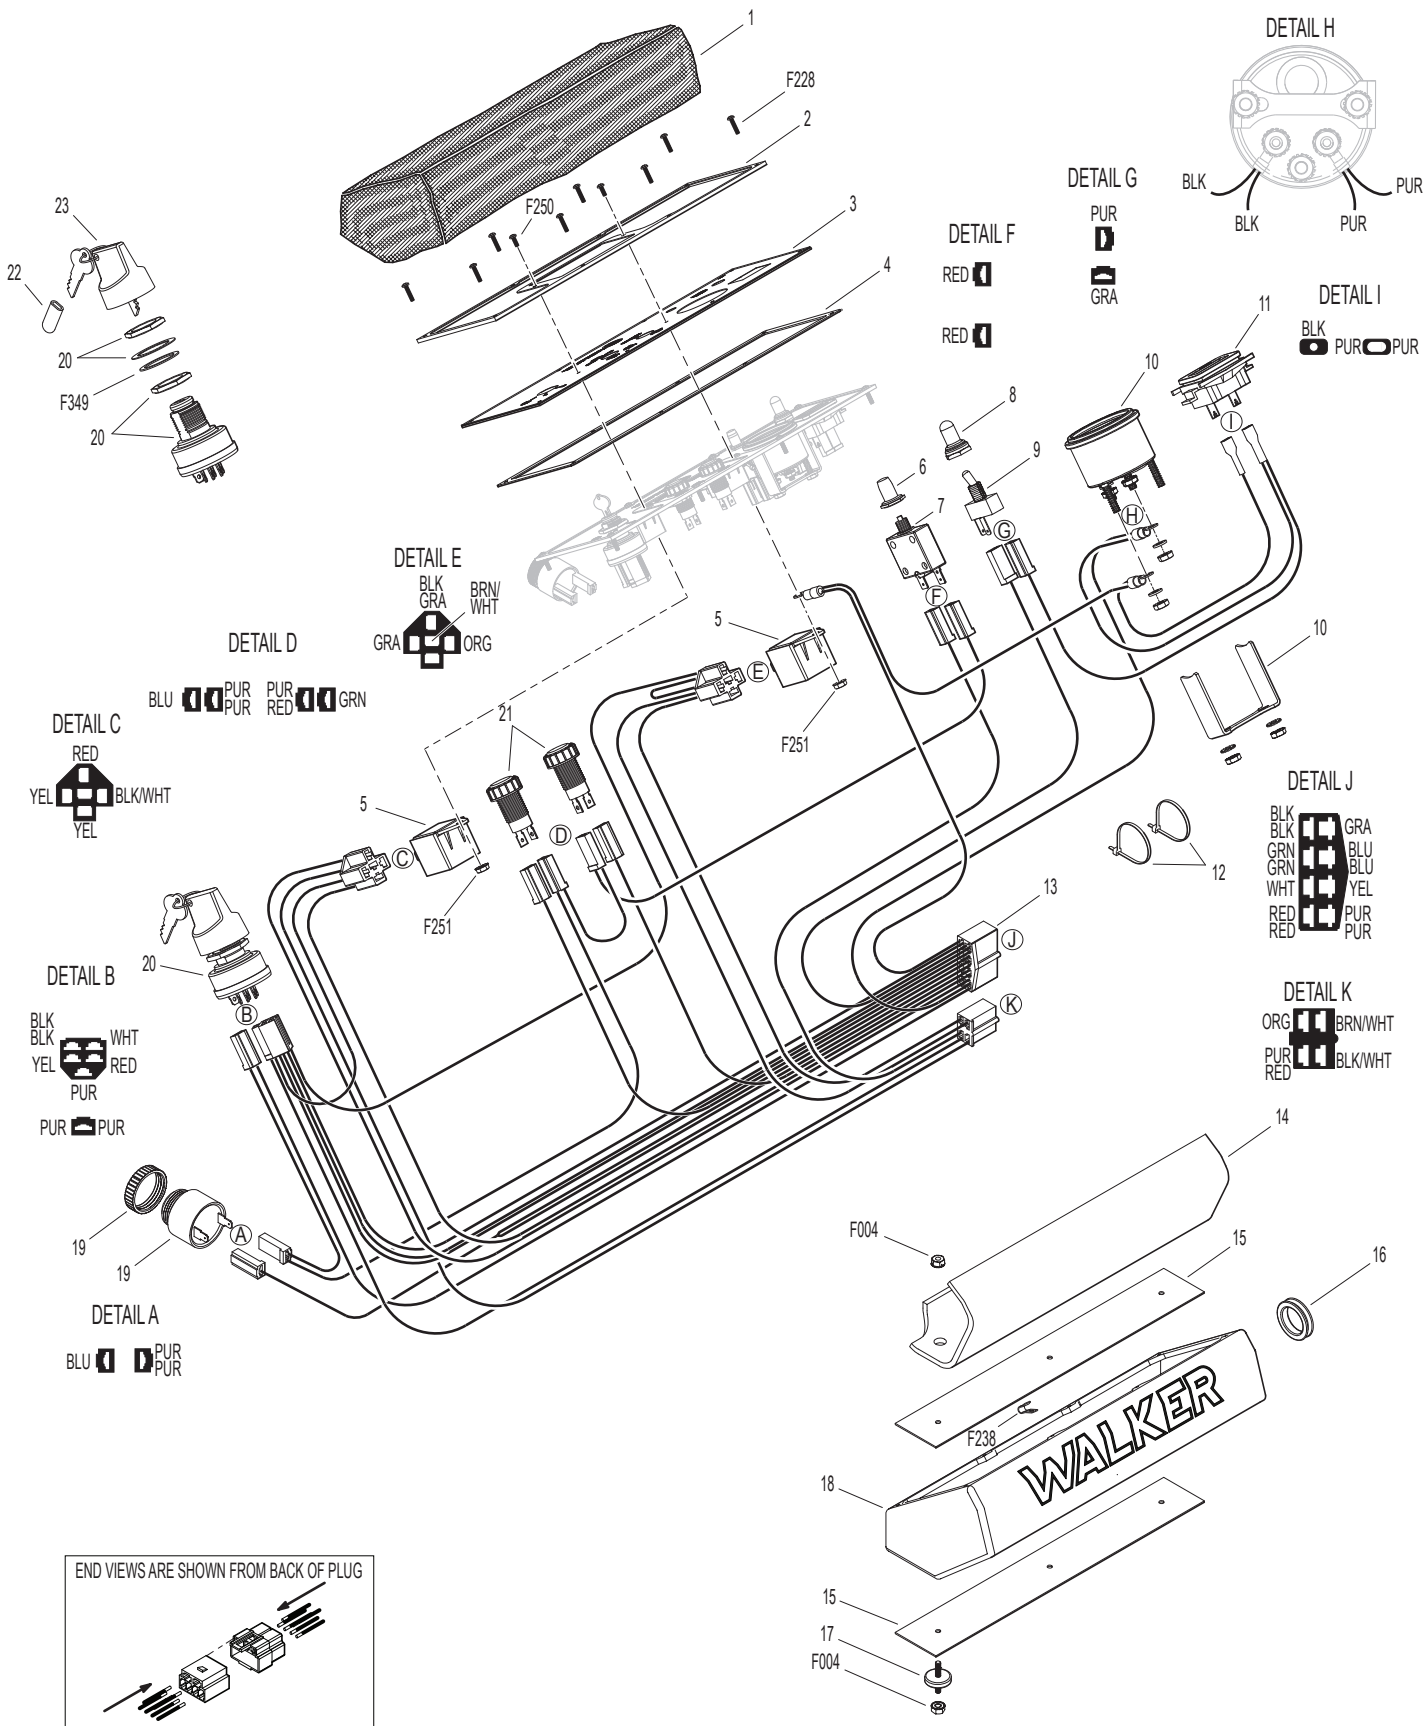

Beginning S/N 149093
 Use only genuine Walker® replacement parts.


ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Harness Assembly				Fasteners			
1	5975-3	Cable Tie (50# x 7")	6	F002		10-24 Keps Nut	6
2	5942-4	Safety Switch (NO)	1	F004		1/4-20 Keps Nut	3
3	5833	Cable Clamp (1/4)	1	F009		5/16-18 Whiz Locknut	1
4	8940-3	Wire Harness	1	F019		1/4-20 ESNA Wing Nut	2
5	5832	Cable Clamp (1/2)	5	F025		10-24 x 3/8 PPHMS	3
6	8012-6	Regulator Adapter Harness	1	F026		10-24 x 1/2 PPHMS	2
7	7833-2	Cable Clamp (1 x 1/4)	2	F031		1/4-20 x 5/8 Hex Bolt	2
8	6942	Relay Switch 20/40 Amp (NC)	1	F032		1/4-20 x 3/4 Hex Bolt	1
9	7948-6	Time Delay Module (.5 Second Delay)	1	F050		1/4 SAE Washer	2
10	7948-5	Time Delay Harness	1	F061		1/4 Star Lock Washer	1
11	8941	Circuit Breaker (30 Amp) Auto Reset / Sealed	1	F079		A/A66D Aluminum Pop Rivet	4
12	8943	Positive Battery Lead Wire (Red)	1	F085		3/16 Rivet Backup Washer	1
13	5975-1	Cable Tie (18# x 3-3/4")	3	F093		5/16-18 x 1 Hex Bolt	1
14	5942-16	Safety Switch (NO), Delta WP	1	F124		10-32 x 3/8 Tapitite Machine Screw	2
15	6104-13	Adapter Harness	1	F129		10-24 x 1/2 PTHMS	1
16	5977-6	Grommet (1 x 1-1/4)	1	F182		1/4 x 5/8 x 1/8 Washer	2
17	6105-3	Harness Clip	1	F232		10-32 Keps Nut	2
				F284		M6 x 1.0 x 8 SCH Screw	1
				F505		6-32 x 7/8 Hex Trim MS, SS	2
				F506		6-32 Nylock Nut	2
Battery Assembly				NOTE: Refer to ELECTRICAL CONNECTORS , Page 36 for identification of all Electrical Wiring Service Parts.			
18	6923	Negative Battery Cable	1				
19	5933	Battery Terminal Insul., Red (+)	1				
20	5844-3	Battery Hold-Down Bar	1				
21	5839	Hook Bolt	2				
22	6390-2	Battery Pan	1				
23	NS	Battery (12V/300CCA/Dry)	1				
24	5932	Battery Terminal Insul., Black (-)	1				
25	7834-2	Wire Saddle (2 Wires)	1				

ELECTRICAL ASSEMBLIES (GHS 10.0 BUSHEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Horn & Harness Channel Assemblies				Fasteners			
1	5977-2	Grommet, Cut (1/8 x 3/8)	2	F002		10-24 Keps Nut	4
2	5975-1	Cable Tie (18# x 3-3/4")	1	F025		10-24 x 3/8 PPHMS	1
3	5975-3	Cable Tie (50# x 7")	1	F037		10-24 x 5/8 PTH Screw	1
4	5536-2	Horn, Full Signal	*	F129		10-24 x 1/2 PTHMS	2
Harness & Grass-Pak® Switch Assemblies				F508		4-40 Keps Nut, SS	2
5	8950-4	Powerfil® Wire Harness (7.0 / 10.0)	1	F509		4-40 x 1/2 Hex Head, SS	2
6	5594-6	Aluminum Shaft & Vane Assembly	1	* Service Part Only			
7	5592-20	Grass-Pak® Switch Assembly	1	NOTE: Refer to ELECTRICAL CONNECTORS , Page 36 for identification of all Electrical Wiring Service Parts.			
8	5833	Cable Clamp (1/4)	2				


ELECTRICAL ASSEMBLIES (GHS 10.0 BUSHEL COMPONENTS)

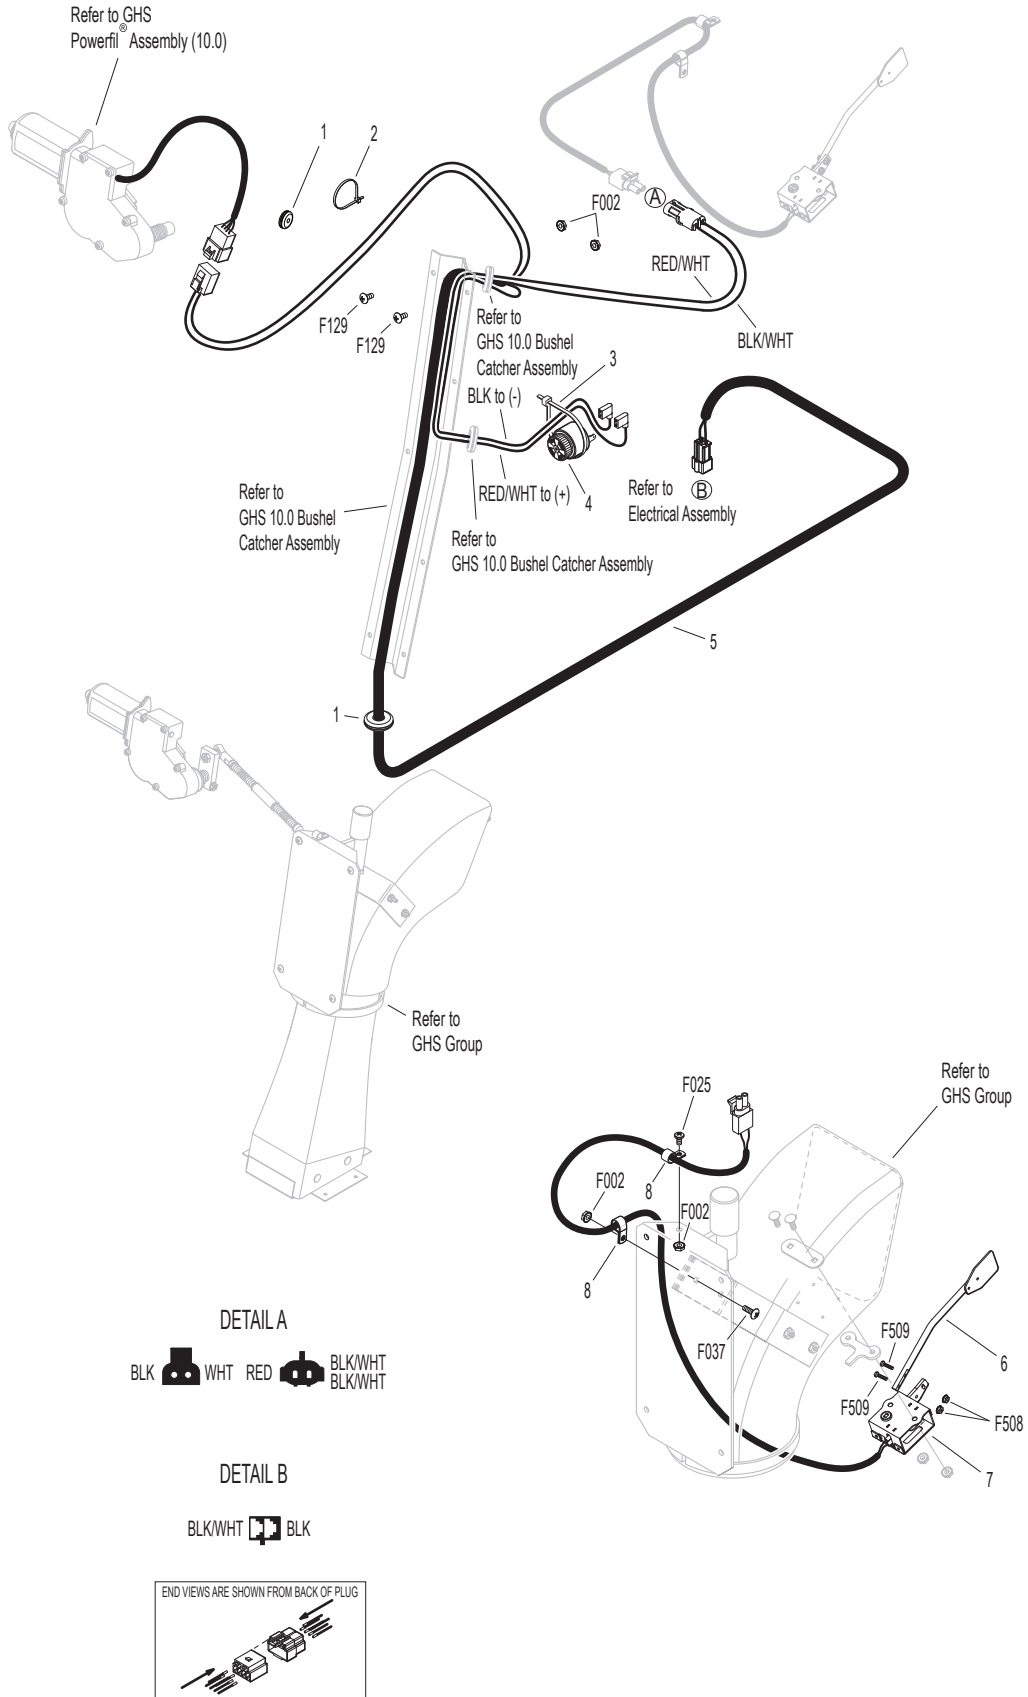

ELECTRICAL CONNECTORS

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Electrical Wiring Service Parts				29	7942-1	2-Way Locking Connector, Female	*
1	5996-1	16-14 GA Butt Connector	*	30	7942-2	2-Way Connector, Male	*
2	5996-11	12-10 GA Butt Connector	*	31	7942-3	2-Way Connector, Female	*
3	7942-14	16-14 GA Shrink Connector	*	32	7942-10	2-Way Locking Connector, Male	*
4	7942-13	12-10 GA Shrink Connector	*	33	5940-8	3-Way Connector, Male	*
5	5995-1	Wire Terminal Adapter	*	34	7942-9	3-Way Connector, Male	*
6	5996-4	16-14 GA Bullet Conn., Male	*	35	8944	3-Way Locking Connector, Male	*
7	5996-5	16-14 GA Bullet Conn., Female	*	36	8944-1	3-Way Locking Connector, Female	*
8	5940-4	16-14 GA Spg. Loaded Term., Female	*	37	7942-11	4-Way Connector, Male	*
9	5940-7	Wire Clip, Female	*	38	7942-12	4-Way Connector, Female	*
10	5996	1/4 x 16-14 GA QKS Term., Female	*	39	7942-5	5-Way Connector, Male	*
11	5996-2	3/16 x 22-18 GA QKS Term., Female	*	40	5940-2	5-Way Connector, Male	*
12	7996	16-14 GA QKS Term., Female	*	41	8942-1	5-Way Connector, Female	*
13	5940-5	16-14 GA Spg. Loaded Term., Male	*	42	7942-6	6-Way Connector, Male	*
14	5996-0	1/4 x 22-18 GA QKS Term., Male	*	43	7942-7	6-Way Connector, Male	*
15	5996-18	16-14 GA Ring Term. (#8) Nylon Insulated	*	44	7942-8	8-Way Connector, Male	*
16	7996-1	1/4 x 16-14 GA QKS Term., Male	*	45	8942-2	8-Way Connector, Female	*
17	5996-8	6 GA Ring Lug (5/16) Insulated	*	46	8942-3	5-Way Connector, Male	*
18	5996-9	22-18 GA Ring Term. (#10)	*	47	5940-9	3-Way Connector (M)	*
19	5996-10	16-14 GA Ring Term. (5/16) Insulated	*	48	7942-15	6-Way Connector (Female)	*
20	5996-12	12-10 GA Ring Term. (5/16)	*	49	7940-3	Packard Plug (Male)	*
21	5996-13	16-14 GA Ring Term. (#10) Insulated	*	50	7940-4	Packard Plug (Female)	*
22	5996-15	12-10 GA Ring Term. (1/2)	*	* Service Part Only			
23	5996-16	6 GA Ring Terminal (1/4)	*	NOTE: Not all Electrical Connectors are used with all assemblies.			
24	5996-17	16-14 GA Ring Term. (1/4)	*	NOTE: Refer to ELECTRICAL ASSEMBLY , Page 32 for locations of Wiring Harness and of all Electrical Wiring Service Parts.			
25	5996-20	12-10 GA Ring Term. (1/4) Insulated	*				
26	5996-21	12-10 GA Ring Term. (#10) Insulated	*				
27	7942-4	Single Connector, Male	*				
28	8942	2-Way Connector, Male	*				


ELECTRICAL CONNECTORS

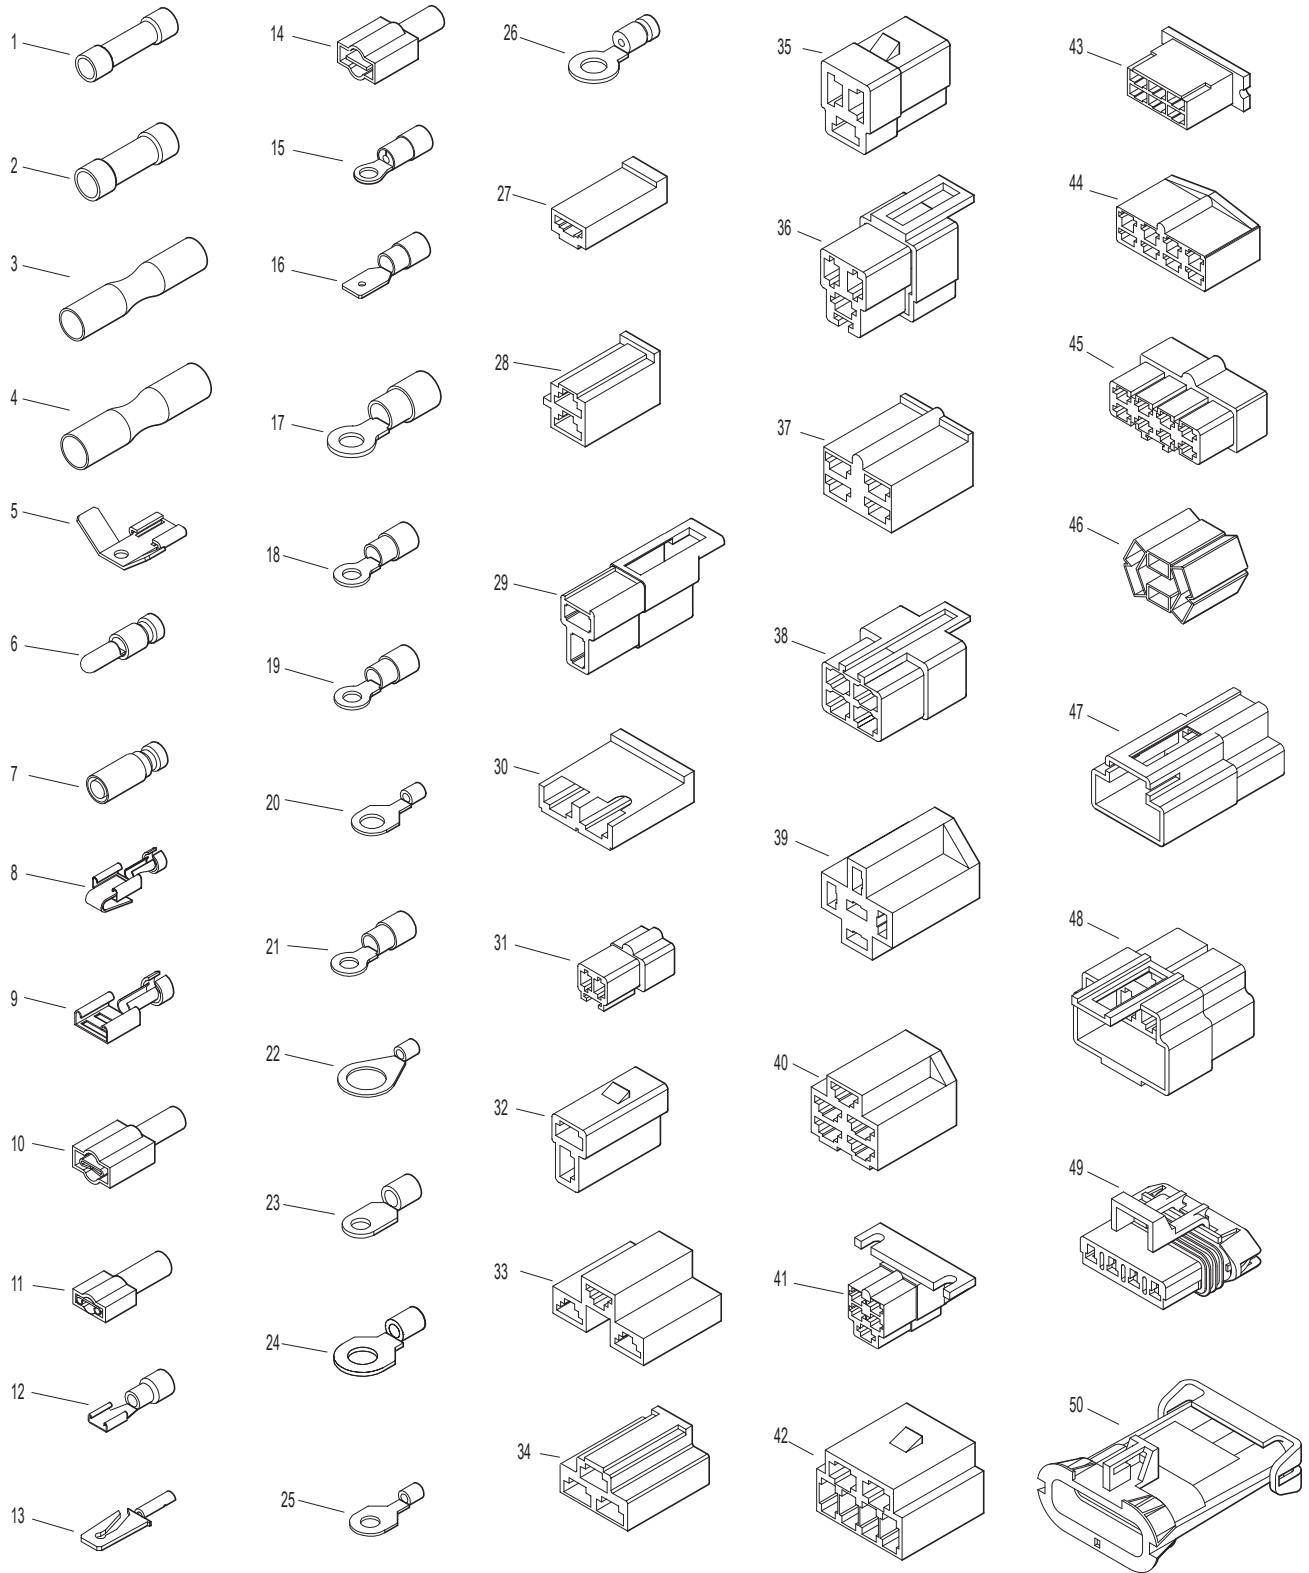

LUBRICATION POINTS

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES	ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points				17	Brake Actuator Pivot	Grease	1
1	Steering Lever Pivot	Grease	4	18	Throttle Control Cable Ends	Oil	2
2	Body Hinge Point	Oil	2	19	Catcher Hinge Point	Oil	2
3	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1	20	Rear Wheel Bearing	Grease	2
4	FSC Actuator Rod Pivots	Oil	2	21	Choke Control Cable Ends	Oil	2
5	(FSC) Friction Body Pivot	Grease	1	22	Engine Oil	Oil**	1
6	FSC Lever Pivot	Grease	1	23	Belt Tightener Pivot, Blower Drive (GHS Model Only)	Grease	1
7	Deck Support Arm Pivot	Grease	2	24	Belt Tightener Pivot, Ground Drive	Grease	1
8	Universal Joint Tube Assembly	Grease*	1	25	PTO Gearbox Dipstick	Oil**	1
9	Parking Brake Lever	Grease	1	26	Hydrostatic Drive	Oil**	2
10	Universal Joint Quick Connect Spline (Grease Slide Area)	Grease	1	27	Choke Control Pivot	Oil	1
11	Gear Axle	Oil**	2	28	Throttle Control Pivot	Oil	1
12	Belt Tightener Pivot, Jackshaft Drive	Grease	1		* Grease every 25 hours.		
13	PTO Clutch Lever Pivot	Grease	1		** Refer to Model T23 Operator's Manual for procedure for checking and changing oil in Engine Crankcase, Hydro- static Transmissions and Gear Axles.		
14	Clutch Actuator Spring Assembly	Grease	2		NOTE: See Model T23 Operator's Manual (P/N 8000-27) for proper lubrication intervals.		
15	Belt Tightener Pivot, PTO Clutch	Grease	1				
16	Brake Actuator Rod and Brake Band Pivot Pins (Clevis)	Oil	3				

LUBRICATION POINTS

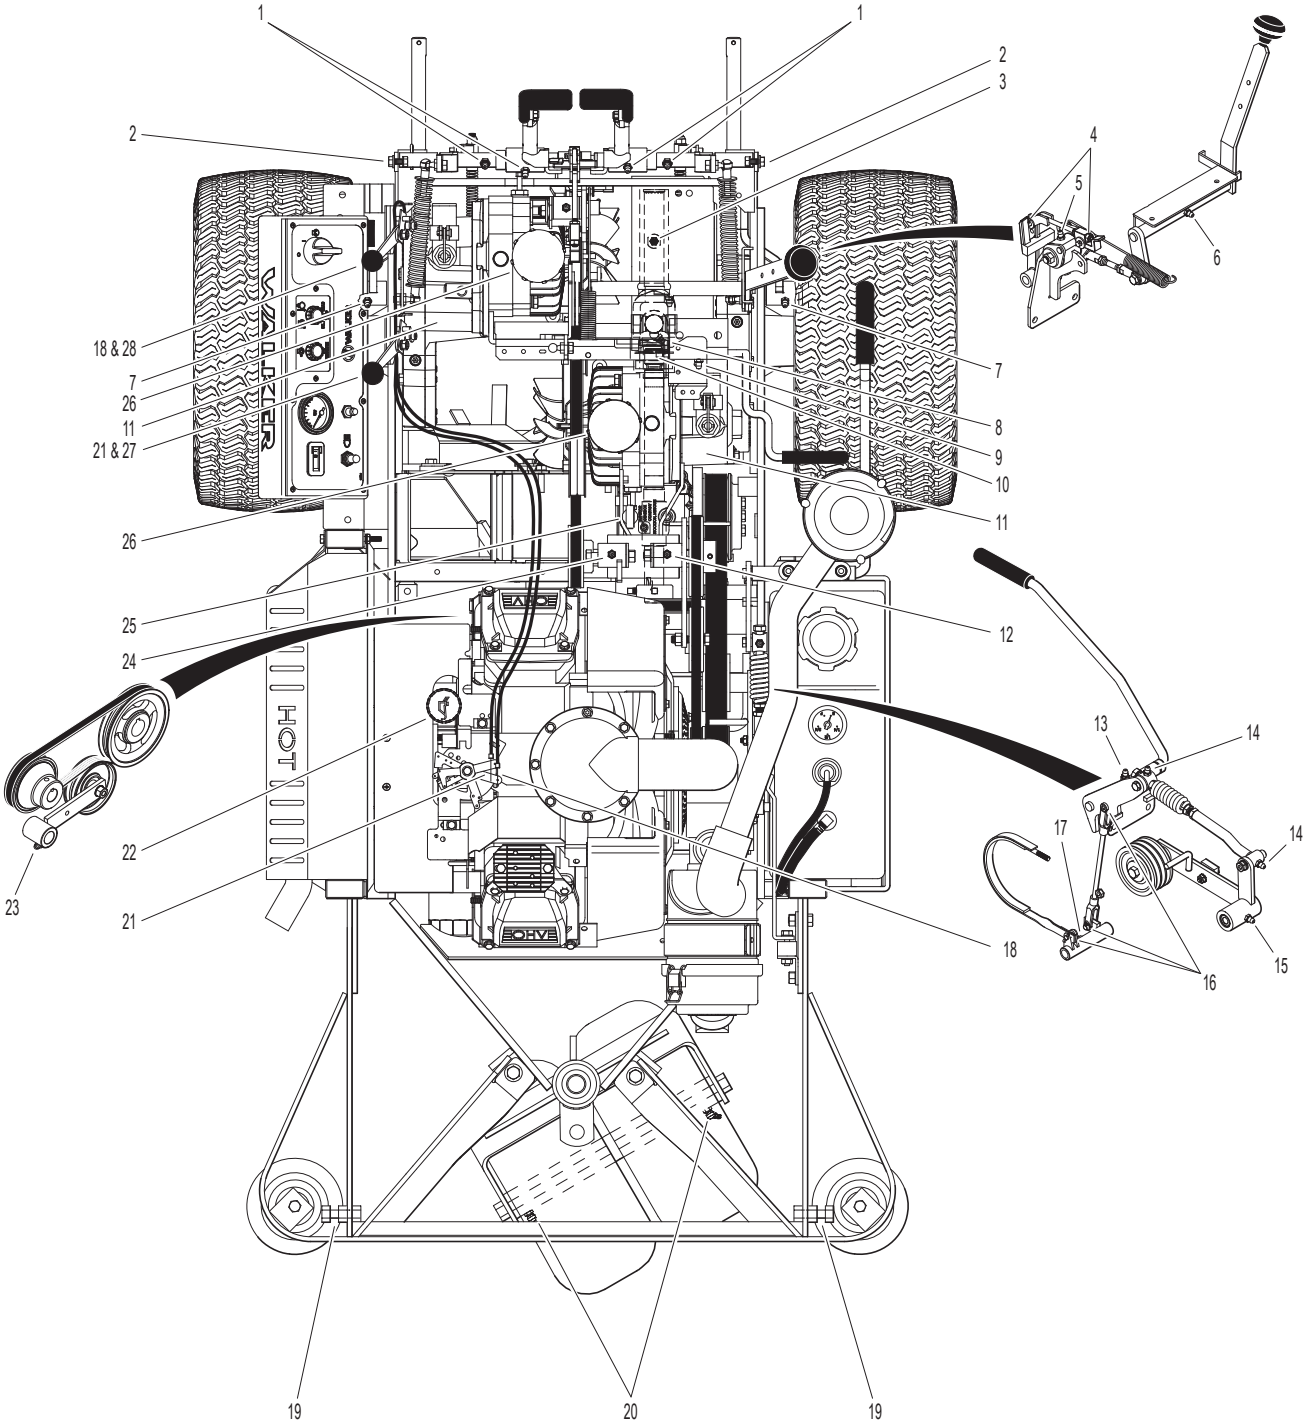

Beginning S/N 149093
Use only genuine Walker® replacement parts.

WIRING SCHEMATIC

WALKER MODEL T23 Beginning S/N 124812


IGNITION SWITCH CIRCUITS	
OFF	G + M
START	B + A / S1 + S2
RUN	B + A

S1 = START CIRCUIT
S2 = START/ACCESSORY CIRCUIT
M = MAGNETO GROUND CIRCUIT
B = BATTERY CIRCUIT
A = ACCESSORY CIRCUIT
G = GROUND CIRCUIT

RELAY - A START RELAY	
OFF	OPEN
START	30 + 87
RUN	OPEN

RELAY - B IGNITION RELAY	
OFF	30 + 87A
START	30 + 87A
PTO ON	OPEN

RELAY - C DELAY RELAY	
OFF	30 + 87A
START	OPEN
RUN	OPEN

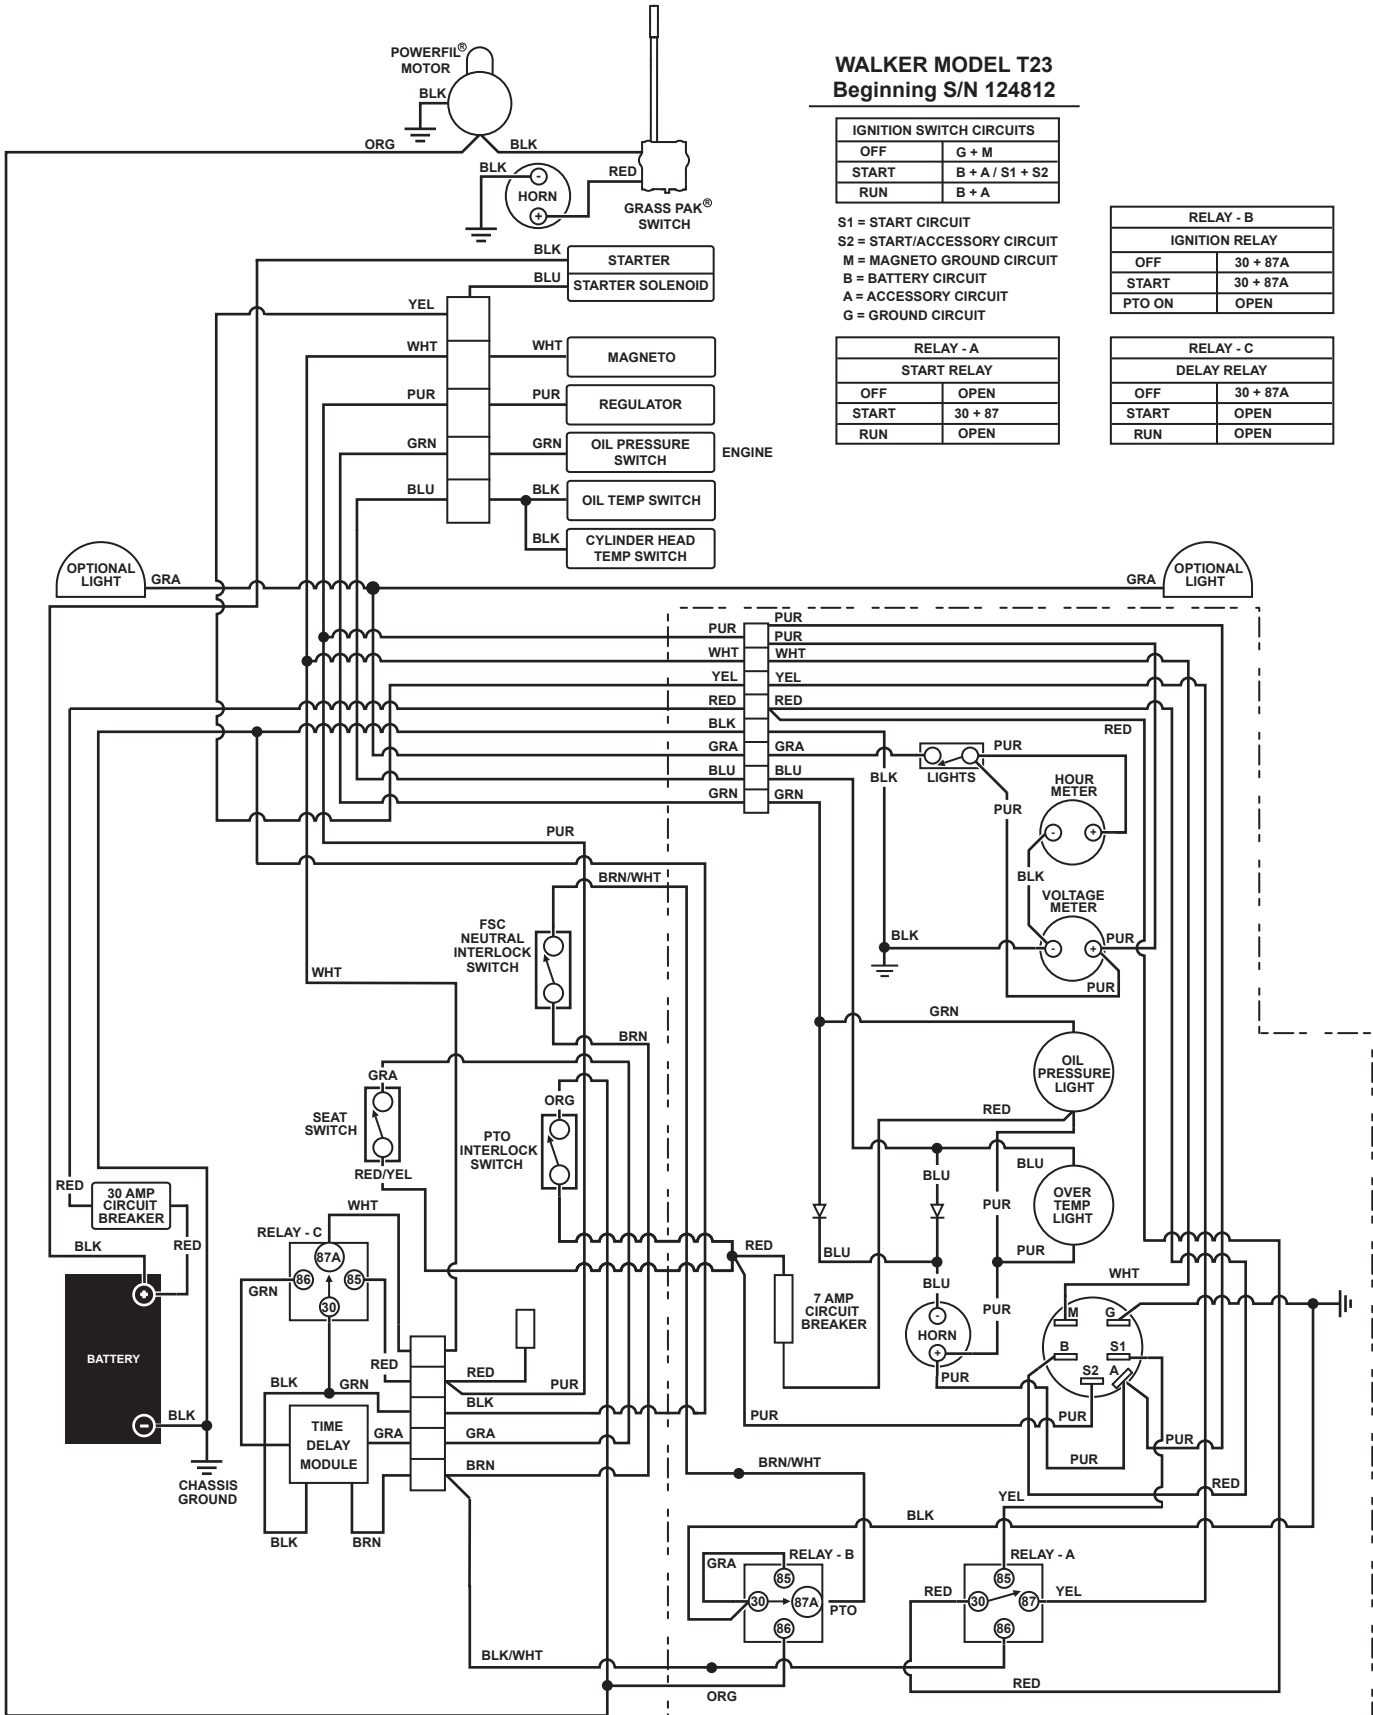

LIMITED WARRANTY FOR WALKER COMMERCIAL RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within one (1) year* after date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Kohler Engine
Battery

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

* Extended warranties are offered for the following powertrain components:

- A three (3) year unlimited hour warranty is offered for the Walker P/N 6200-9 Gear Axle Assembly.
- A three (3) year or 3000 hour (whichever comes first) warranty is offered for Eaton Model 7 Hydrostatic transmissions; covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 3000 hours.

2. WHAT THIS WARRANTY DOES NOT COVER:


- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Operator's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

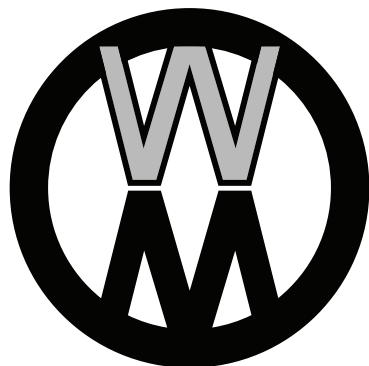

WALKER

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 040918 PRINTED IN USA www.walkermowers.com ©2018 WALKER MFG. CO